


TOSHIBA

COLOUR TELEVISION

2500TST

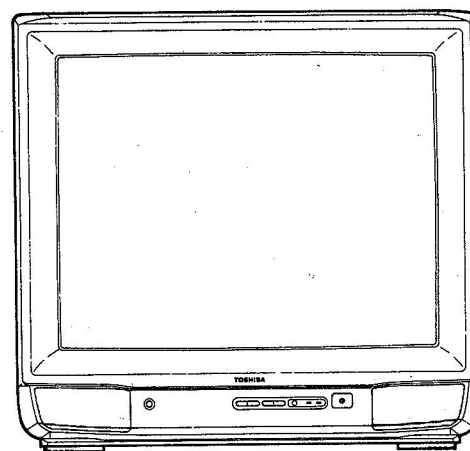

SPECIFICATIONS

Input Power Rating:	104 watts, AC 220 volts, 50 Hz
Aerial Input Impedance:	75 ohm unbalanced type for VHF and UHF
Receiving Channels:	PAL B/G Standard, SECAM B/G Standard: VHF channels 2 to 4, 5 to 12 and S1 to S20 UHF channels 21 to 69 PAL D/K Standard, SECAM D/K Standard: VHF channels 1 to 12 UHF channels 21 to 69
Intermediate Frequencies:	Picture I-F carrier frequency 38.9 MHz Sound I-F carrier frequency 33.4 MHz
Picture Tube:	25 inches, A59ECY13X31, 590 mm (measured on diagonal of viewable picture area), 110° deflection
Sound Output:	3.0 watts (at 10% harmonic distortion), Max. 4.5 watts
Speaker:	70 mm x 60 mm oval 2 pcs
Aux. Terminals:	Headphone Jack, 21 pin socket, S-VIDEO/AUDIO socket, AV INPUT socket
Dimensions:	Height 556 mm Width 600 mm Depth 442 mm
Weight:	26 kg

Specifications are subject to change without notice.

SAFETY INSTRUCTIONS

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" INSTRUCTIONS BELOW.

X-RAY RADIATION PRECAUTION

1. The E.H.T. must be checked every time the receiver is serviced to ensure that the C.R.T. does not emit X-ray radiation as result of excessive E.H.T. voltage. The nominal E.H.T. for this receiver is 27.5 kV at zero beam current (minimum brightness) operating at 220V a.c. The maximum E.H.T. voltage permissible in any operating circumstances must not exceed 29.0 kV. When checking the E.H.T., use the 'High Voltage Check' procedure in this manual using an accurate E.H.T. voltmeter.
2. The only source of X-RAY radiation in this receiver is the C.R.T. To prevent X-ray radiation, the replacement C.R.T. must be identical to the original fitted as specified in the Parts List.
3. Some components used in this receiver have safety related characteristics preventing the C.R.T. from emitting X-ray radiation. For continued safety, replacement component should only be made after referring the Product Safety Notice below.



SAFETY PRECAUTION

1. This receiver has a nominal working E.H.T. voltage of 25.0 kV. Extreme caution should be exercised when working on the receiver with the back removed.
Do not attempt to service this receiver if you are not conversant with the precautions and procedures for working on high voltage equipment.
When handling or working on the C.R.T., always discharge the anode to the receiver chassis before removing the anode cap.
The C.R.T., if broken, will violently expel glass fragments. Use shatter proof goggles and take extreme care while handling.
Do not hold the C.R.T. by the neck as this is a very dangerous practice.
2. It is essential that to maintain the safety of the customer all cable forms be replaced exactly as supplied from factory.
3. A small part of the chassis used in this receiver is, when operating, at approximately half mains potential at all times. It is therefore essential in the interest of safety that when serving or connecting any test equipment the receiver should be supplied via a suitable isolating transformer of adequate rating.
4. Replace blown fuses within the receiver with the fuse specified in the parts list.
5. When replacing wires or components to terminals or tags, wind the leads around the terminal before soldering. When replacing safety components identified by the international hazard symbols on the circuit diagram and parts list, it must be a Toshiba approved type and must be mounted as the original.
6. Keep wires away from high temperature components.


PRODUCT SAFETY NOTICE

Many electrical and mechanical components in this chassis have special safety-related characteristics. These characteristics are often passed unnoticed by a visual inspection and the X-ray radiation protection afforded by them cannot necessarily be obtained by using replacements rated at higher voltages or wattage, etc. Components which have these special safety characteristics in this manual and its supplements are identified by the international hazard symbols on the schematic diagram and parts list. Before replacing any of these components read the parts list in this manual carefully. Substitute replacement components which do not have the same safety characteristics as specified in the parts list may create X-ray radiation.

FRONT CONTROLS AND REAR VIEWS

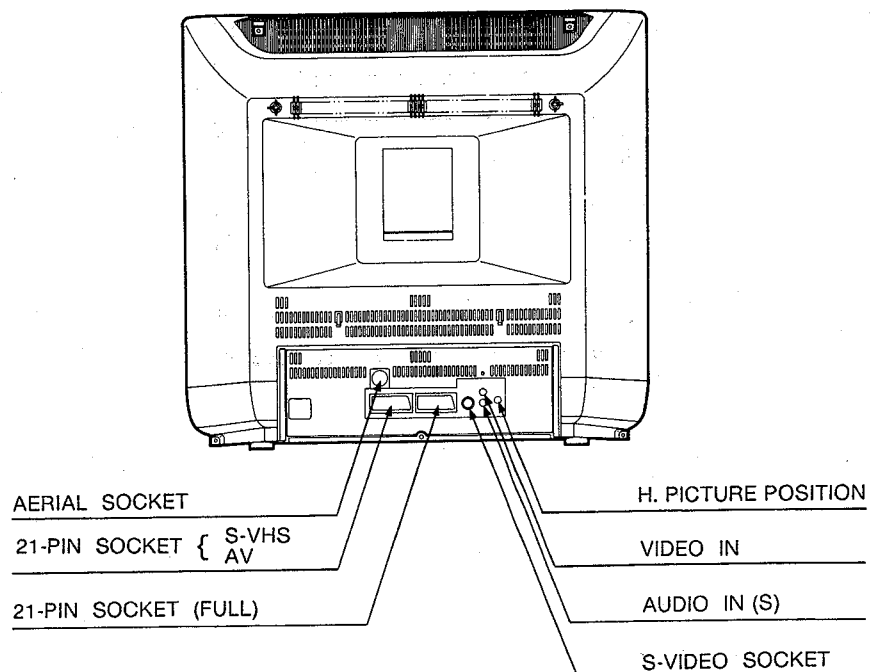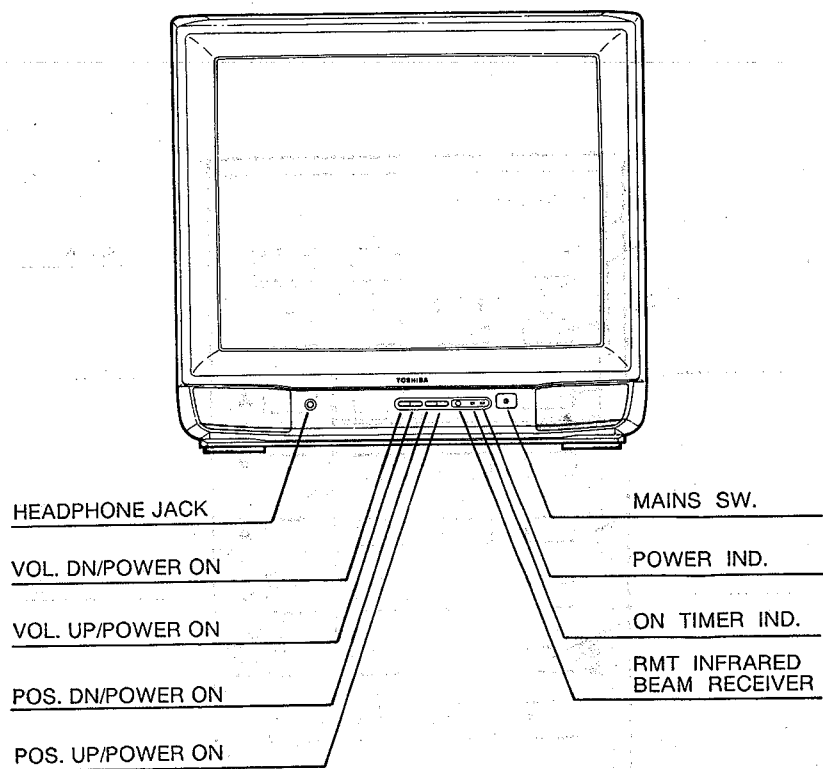

REMOTE HAND HELD UNIT

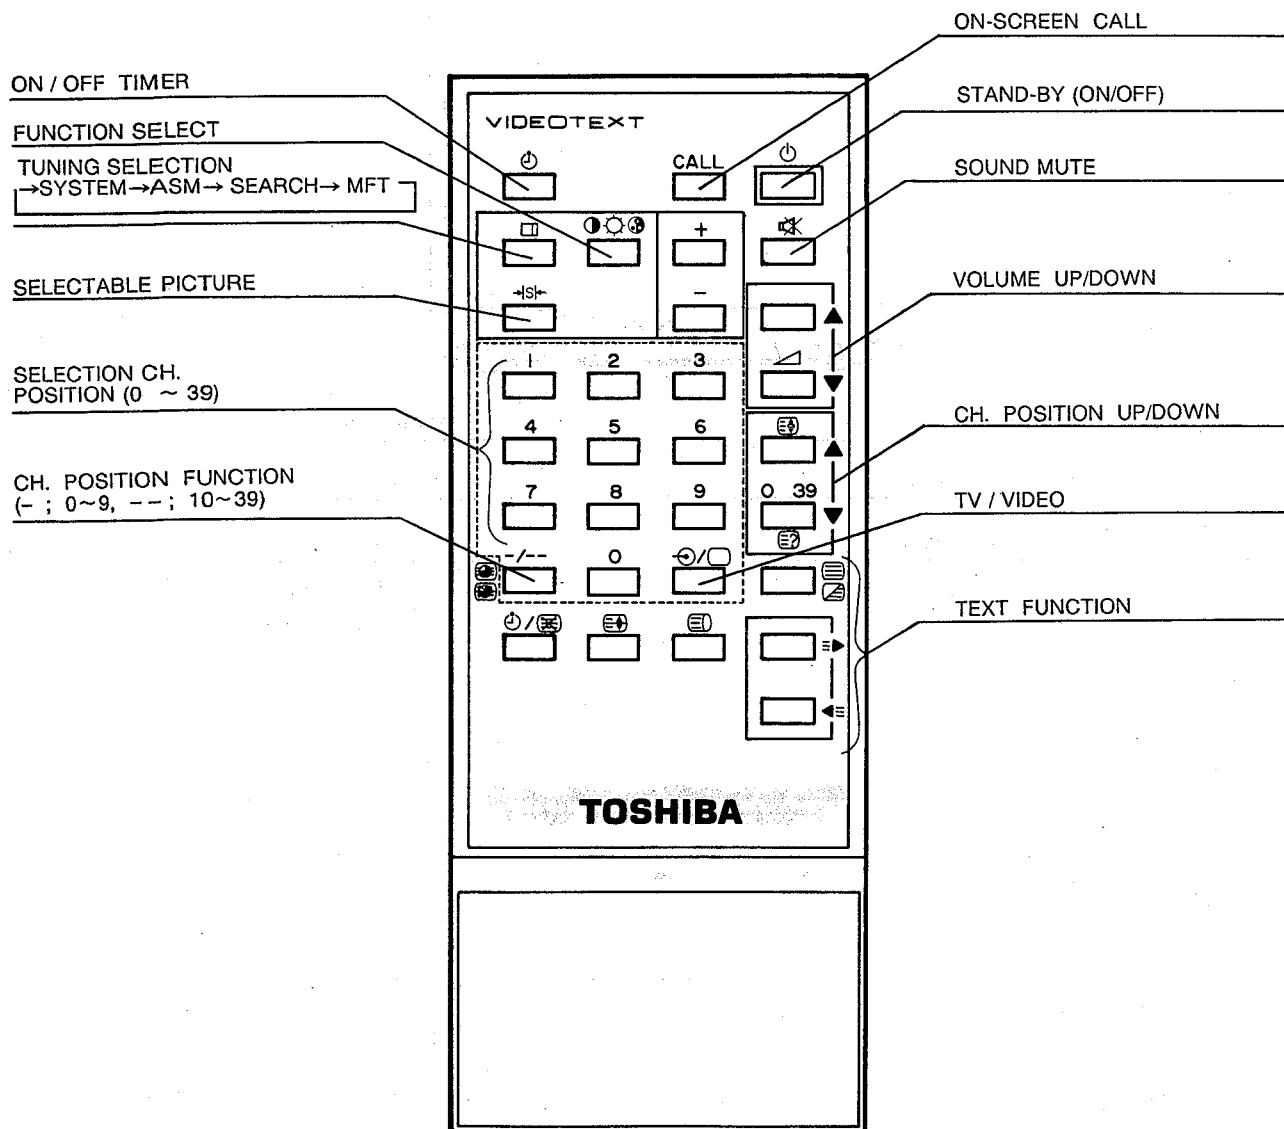

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 2 OF THIS MANUAL.

INSTALLATION AND SERVICE ADJUSTMENTS

GENERAL INFORMATION

All adjustments are thoroughly checked and corrected when the receiver leaves the factory. Therefore the receiver should operate normally and produce proper colour and B/W pictures upon installation. However, several minor adjustments may be required depending on the particular location in which the receiver is operated.

This receiver is shipped completely in cardboard carton. Carefully draw out the receiver from the carton and remove all packing materials.

Plug the power cord into a convenient 220 volts 50 Hz AC two pin power outlet. Turn the receiver ON. Check and adjust all the customer controls such as BRIGHTNESS, CONTRAST and COLOUR Controls to obtain natural colour or B/W picture.

AUTOMATIC DEGAUSSING

A degaussing coil is mounted around the picture tube so that external degaussing after moving the receiver is normally unnecessary, providing the receiver is properly degaussed upon installation. The degaussing coil operates for about 1 second after the power to the receiver is switched ON. If the set is moved or faced in a different direction, the power switch must be switched off at least one hour in order that the automatic degaussing circuit operates properly. Should the chassis or parts of the cabinet become magnetized to cause poor colour purity, use an external degaussing coil. Slowly move the degaussing coil around the faceplate of the picture tube, the sides and front of the receiver and slowly withdraw the coil to a distance of about 2 m before disconnecting it from AC source. If colour shading still persists, perform the COLOUR PURITY ADJUSTMENT and CONVERGENCE ADJUSTMENTS procedures.

+ 145 VOLT POWER SUPPLY ADJUSTMENT (R851)

CAUTION: +B voltage closely relates to the high voltage. To prevent hazardous X-RAY RADIATION, the +B voltage must be properly adjusted to +145 volts.

1. Tune in an active channel. Adjust the BRIGHTNESS and CONTRAST Controls for normal picture.
2. Check that the AC power Line voltage is normal. (AC 220 volts, 50 Hz)
3. Connect a digital voltmeter to both leads of C451.
4. Adjust R851 for 145V reading on the meter.
5. Remove the digital voltmeter.

HIGH VOLTAGE CHECK

CAUTION: There is no HIGH VOLTAGE ADJUSTMENT on this chassis.

1. Connect an accurate high voltage meter to the second anode of the picture tube.
2. Turn on the receiver. Set the BRIGHTNESS and CONTRAST Controls to minimum (zero beam current).
3. High voltage will be measured below 29.0 kV.
4. Rotate the BRIGHTNESS Control to both extremes to be sure the high voltage does not exceed the limit of 29.0 kV under any conditions.

HEIGHT ADJUSTMENT

1. Receive the WG PHILIPS pattern, and set the contrast and colour to minimum, and the brightness to centre.
2. Change the VERT POSITION SW (S301) so the round shape in the pattern is located in the centre of screen.
3. HEIGHT Control (R351) changes the size of the picture or pattern, having an equal effect on the top and bottom. Make final adjustment to overscan the mask 2 cm at top and bottom.

HORIZONTAL CENTRE ADJUSTMENT

1. Receive the WG PHILIPS pattern.
2. Set the contrast and colour to minimum, and the brightness to centre.
3. Adjust H. CENTRE USER Control (R452) to the click (centre) position.
4. Adjust H. CENTRE SUB Control (R451) so the pattern centre can be located at the screen centre.

FOCUS ADJUSTMENT

Adjust FOCUS Control on FLYBACK TRANS.(T461) for well defined scanning lines in the centre area on the screen.

R-F AGC ADJUSTMENT

1. Tune the set in the strongest station in your area.
2. Turn AGC DELAY Control (R151) on PIF/SIF Board to fully counterclockwise position.
3. Adjust AGC DELAY Control clockwise until noise (snow) just disappears on the screen.

BELL COIL (LM01) ADJUSTMENT

1. Receive SECAM colour bar signal.
2. Connect the synchroscope to the terminal pin 2 of LM01.
3. Adjust LM01 for the flat level of amplitude in each colour bar waveform on the scope. (See figure 1.)

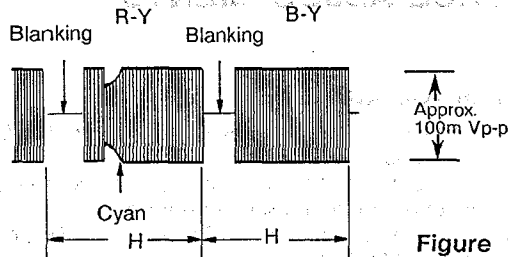


Figure 1.

IDENT COIL (LM04) ADJUSTMENT

1. Receive SECAM colour bar signal.
2. Connect the DC voltmeter (Digital Voltmeter) to the pin 23 of IC501.
3. Adjust LM04 for the maximum indication (approx. DC10V) on the meter.

B-Y, R-Y DEMOD COIL (LM02, LM03) ADJUSTMENT

1. Receive SECAM colour bar signal.
2. Set the COLOUR, BRIGHTNESS and CONTRAST Controls free.
3. Connect the synchroscope to the pin 62 of IC501.
4. Adjust LM02 so that the white level in picture part reaches to the vertical retrace line. (See figure 2.)
5. Then change the connection of synchroscope from the pin 62 to the pin 60 of IC501.
6. Adjust LM03 so that the white level in picture part reaches to the vertical retrace line. (See figure 3.)

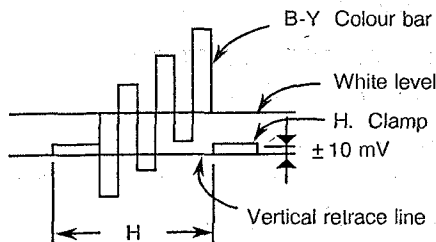


Figure 2.

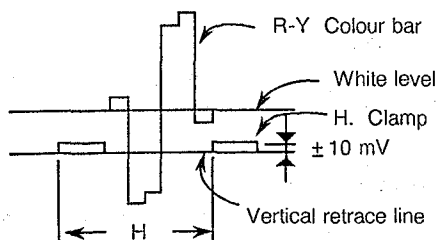


Figure 3.

PAL MATRIX ADJUSTMENT

1. Tune in the colour programme of the Philips pattern.
2. Set the COLOUR Control to obtain the proper colour.
3. If the PAL MATRIX adjustment is incorrect, the Venetian Blind would appear in the colour bars area. This case needs the adjustment.
4. At the first, adjust DL PHASE ADJ. Coil (L551) to minimize the Venetian Blind.
5. Next adjust 1H-DL ADJ. VR (R551) to minimize the Blind.
6. If the Venetian Blind still remains, adjust 1H-DL PHASE ADJ. Coil (L551) to minimize the Blind again.
7. Repeat the item 5 and 6 procedures, adjust the R551 and L551 until the Blind does not appear.

CRT GREY SCALE ADJUSTMENT

1. Tune in an active channel.
2. Turn the SCREEN Control (on T461) fully counterclockwise.
3. Set the RED, GREEN and BLUE CUT OFF Controls (R557, R558, R559) counterclockwise to the minimum position.
4. Set the GREEN and BLUE DRIVE Controls (R252, R253) to the mid position.
5. Set the CUT OFF SW. (S202) in the H. line position.
6. Short temporarily terminal of RASTER CHIP on the CRT DRIVE Board.
7. Set the CONTRAST, COLOUR Controls to minimum and BRIGHTNESS Control to centre. Set the SUB BRIGHTNESS Control to minimum.
8. Rotate the SCREEN Control gradually clockwise until the first horizontal line of a colour (RED, GREEN or BLUE) appears slightly on the screen. Set the SCREEN Control to this position.
9. Open the terminal of RASTER CHIP on the CRT DRIVE Board.
10. Adjust the CUT OFF Controls to obtain the slightly lighted horizontal lines in the same levels of three colours (RED, GREEN and BLUE). The lines may look like white if the CUT OFF Controls are adjusted properly.
11. Return the CUT OFF SW. (S202) in the receiving position.
12. Set the BRIGHTNESS Control to the maximum and COLOUR Control to the minimum.
13. Adjust the BLUE and GREEN DRIVE Controls (R252/R253) to obtain proper white-balanced picture in high light areas.
14. Set the BRIGHTNESS and CONTRAST Controls to obtain dark grey raster. Then check the white balance in low brightness. If the white balance is not proper, retouch the CUT OFF Controls and DRIVE Controls to obtain a good white balance in both low and high light areas.

SUB-BRIGHTNESS ADJUSTMENT

1. Tune in a colour programme.
2. Set the CONTRAST Control to the maximum and the BRIGHTNESS Control to the centre.
3. Set the COLOUR Control to the minimum.
4. Set the SUB-BRIGHT. Control (R255) to the centre and leave the receiver for five minutes in this state.
5. Watching the picture well, adjust the SUB-BRIGHT. Control in the position where the picture does not show evidence of blooming in high bright area and not appear too dark in low bright portion.
6. Check the proper picture variation by rotating the CONTRAST and BRIGHTNESS Controls to both extremes.
7. If the picture does not appear dark with the CONTRAST and BRIGHTNESS Controls turned to the minimum, or not appear bright with the controls turned to the maximum, adjust the SUB-BRIGHT. Control again for the acceptable picture.

SIF DET (L651) ADJUSTMENT

1. Connect SIF generator to pin 16 of IC101 through 0.01 μ F capacitor.
2. Connect the oscilloscope to pin 9 of IC101.
3. Set up the SIF generator as described below.
 - Sound carrier frequency : 5.5 MHz
 - Modulation frequency : 1000 Hz
 - Frequency deviation : ± 15 kHz
 - Signal level : 80 dB μ
(50 ohm load)
4. Adjust L651 for the maximum response of 1000 Hz det-out on scope.

PICTURE WIDTH AND DISTORTION ADJUSTMENT (Width, Pincushion Distortion, Trapezoid Distortion)

1. Perform this adjustment after +B and H. CENTRE adjustment are completed.
2. Receive the WG PHILIPS pattern.
3. Set the contrast and colour to minimum, and the brightness to maximum.
4. Adjust H. WIDTH Control (R358) for the horizontal width so that the white flags on left and right of the pattern are just hidden.
5. Adjust PINCUSHION CORRECTION Control (R357) to correct the vertical line on left and right straight.
6. Adjust KEYSTONE Control (R356) to correct the trapezoid distortion.
7. Readjust H. WIDTH control for the precision.

PICTURE I-F SWEEP ALIGNMENT

GENERAL.....	Refer to figure 4 for test equipment connection.
PRELIMINARY STEPS	1. Disconnect the IF Board from the Main Board. 2. Supply +12 volts to the IF Board.
SWEEP/MARKER GENERATOR.....	Connect to the pin 6 of P101 as shown in figure 4 on the IF Board. Set to 30 ~ 40 MHz sweep with signal level of 75 ~ 85 dB μ .
OSCILLOSCOPE.....	Connect though the detector to the pin 18 of IC101 on the IF Board.

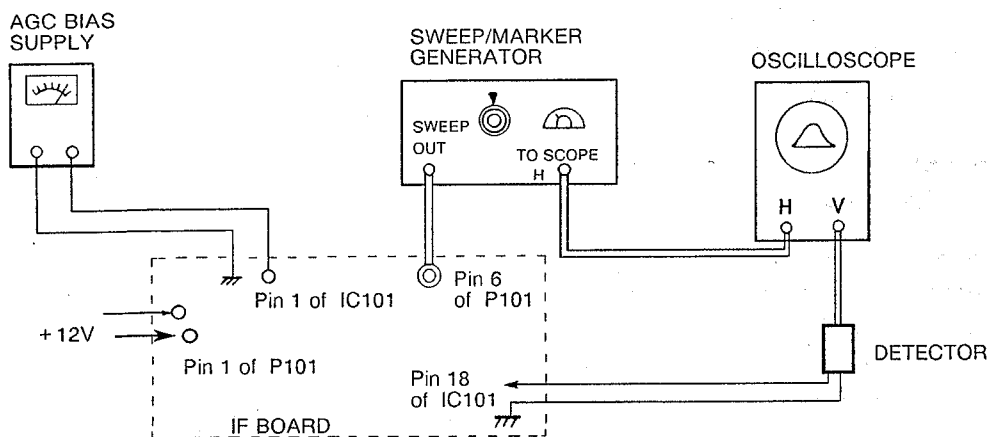


Figure 4. Picture IF Sweep Alignment

STEP	SWEEP/MARGER GENERATOR	ADJUST	REMARKS
Detector Coil	38.9 MHz Marker "ON"	L151	<ul style="list-style-type: none"> Supply +2 to +3 volts to pin 1 of IC101 to set the output level for 0.4 Vp-p on the scope. Adjust L151 so that the marker position (38.9 MHz) on the response can lower to minimum. (See figure 5.)
After completing the above steps, disconnect the equipment and re-solder the liniks on the Main Board, and adjust the AGC Delay control (R151) following DELAYED RF AGC ADJUSTMENTS.			


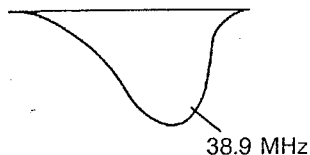


Figure 5. Magnified Response Curve

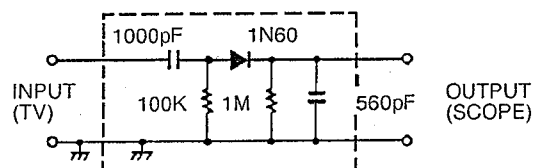

Detector Diagram

AFC ALIGNMENT

GENERAL Refer to figure 6 for test equipment connection.

PRELIMINARY STEPS 1. Disconnect the IF Board from the Main Board.
 2. Supply +12 volts to the IF Board. (Pin 1 of P101)
 3. Turn AGC DELAY Control (R151) on the IF Board fully clockwise.

DVM..... Connect to the resistor R171 (Ⓢ in figure 3) and ground.



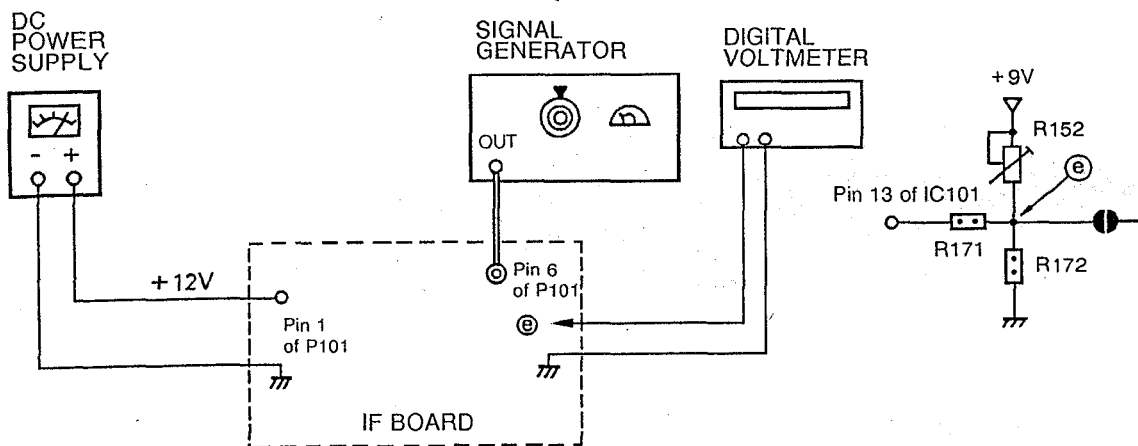


Figure 6. AFC Alignment

STEP	SIGNAL GENERATOR	ADJUST	REMARKS
1. AFC Balance (R152)	NO SIGNAL	R152	<ul style="list-style-type: none"> Short the pin 1 of IC101 to ground. Adjust R152 for 4.5 volts at the point Ⓢ in figure 6.
2. AFC Coil (L152)	38.9 MHz CARRIER WAVE (Level : 75 to 85 dB μ)	L152	<ul style="list-style-type: none"> Remove the short of pin 1 of IC101. Connect IF carrier wave to the pin 6 of P101. Adjust L152 for 2.5 volts on the meter at the point Ⓢ.

CABINET REPLACEMENT PARTS LIST

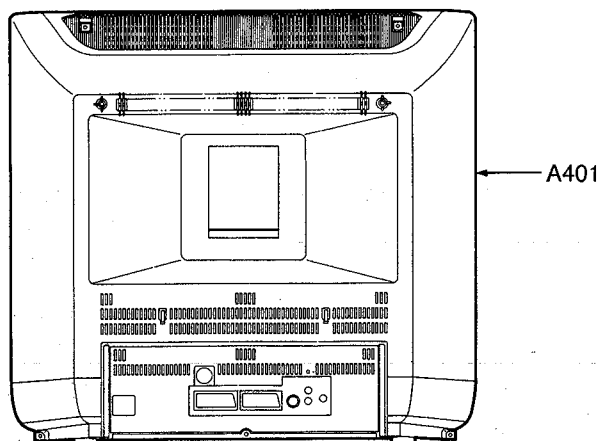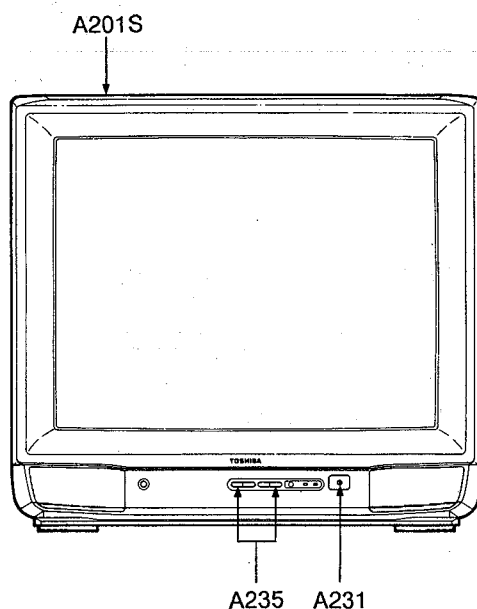

Location No.	Part No.	Description
A201S	23418788	Front Cover
A231	23443476	Button, POWER
A235	23443477	Button, UP-DOWN
A401	23423590	Back Cover
A411	23567455	Label, Model No., B/C
A420	23838432	Ornament
A701	23523733	Carton Box
A702	23934122	Packing, Bottom
A703	23934123	Packing, Top
A710	23567456	Label, Model No., Carton
Y101	23561070	Owner's Manual, English
Y102	23561071	Owner's Manual, Czechoslovak
Y103	23561072	Owner's Manual, Yugoslavian
Y104	23561073	Owner's Manual, Hungarian

CHASSIS REPLACEMENT PARTS LIST

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 2 OF THIS MANUAL.

CAUTION: The international hazard symbols in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 2. Do not degrade the safety of the receiver through improper servicing.

NOTICE: The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.

ABBREVIATIONS:

Capacitors.....	CD : Ceramic Disk	PF : Plastic Film	EL : Electrolytic
Resistors.....	CF : Carbon Film	CC : Carbon Composition	MF : Metal Film
	OMF : Oxide Metal Film	VR : Variable Resistor	FR : Fusible Resistor

(All CD and PF capacitors are $\pm 5\%$, 50V and all resistors, $\pm 5\%$, 1/6W unless otherwise noted.)

Location No.	Part No.	Description
CAPACITORS		
C101	24212102	CD, 1000pF, $\pm 10\%$
C102	24232103	CD, 0.01 μ F, +80%, -20%
C103	24232103	CD, 0.01 μ F, +80%, -20%
C104	24206228	EL, 0.22 μ F, 50V
C105	24232103	CD, 0.01 μ F, +80%, -20%
C107	24212102	CD, 1000pF, $\pm 10\%$
C108	24085031	EL, 1 μ F, $\pm 20\%$, 25V, Non-Polar
C109	24633101	EL, 100 μ F, 16V
C111	24633470	EL, 47 μ F, 16V
C112	24232103	CD, 0.01 μ F, +80%, -20%
C162	24232103	CD, 0.01 μ F, +80%, -20%
C163	24212102	CD, 1000pF, $\pm 10\%$
C164	24212102	CD, 1000pF, $\pm 10\%$
C165	24212102	CD, 1000pF, $\pm 10\%$
C167	24212102	CD, 1000pF, $\pm 10\%$
C171	24436220	CD, 22pF
C172	24212102	CD, 1000pF, $\pm 10\%$
C201	24636100	EL, 10 μ F, 50V
C202	24795101	EL, 100 μ F, 25V
C203	24232103	CD, 0.01 μ F, +80%, -20%
C204	24797220	EL, 22 μ F, $\pm 20\%$, 50V
C205	24636478	EL, 0.47 μ F, 50V
C208	24212102	CD, 1000pF, $\pm 10\%$
C209	24232103	CD, 0.01 μ F, +80%, -20%
C210	24636100	EL, 10 μ F, 50V
C211	24212561	CD, 560pF, $\pm 10\%$
C212	24636010	EL, 1 μ F, 50V
C213	24590104	PF, 0.1 μ F
C214	24633101	EL, 100 μ F, 16V
C240	24538474	PF, 0.47 μ F
C301	24636229	EL, 2.2 μ F, 50V
C302	24212152	CD, 1500pF, $\pm 10\%$
C303	24617912	EL, 2.2 μ F, $\pm 10\%$, 50V
C304	24212102	CD, 1000pF, $\pm 10\%$
C306	24603563	PF, 0.056 μ F, $\pm 10\%$, 100V
C307	24232103	CD, 0.01 μ F, +80%, -20%
C312	24590243	PF, 0.024 μ F
C313	24755221	EL, 220 μ F, 35V
C314	24796102	EL, 1000 μ F, 35V

Location No.	Part No.	Description
C315	24214221	CD, 220pF, $\pm 10\%$, 500V
C316	24667332	EL, 3300 μ F, $\pm 20\%$, 25V
C317	24617912	EL, 2.2 μ F, $\pm 10\%$, 50V
C318	24082049	PF, 0.047 μ F, 100V
C319	24693224	PF, 0.22 μ F, 100V
C321	24214391	CD, 390pF, $\pm 10\%$, 500V
C327	24693224	PF, 0.22 μ F, 100V
C328	24212272	CD, 2700pF, $\pm 10\%$
C330	24796470	EL, 47 μ F, 35V
C360	24095945	PF, 0.47 μ F, 200V
C362	24212152	CD, 1500pF, $\pm 10\%$
C363	24095948	PF, 0.36 μ F, 200V
C364	24212471	CD, 470pF, $\pm 10\%$
C365	24797470	EL, 47 μ F, $\pm 20\%$, 50V
C366	24590182	PF, 1800pF
C367	24590223	PF, 0.022 μ F
C368	24590104	PF, 0.1 μ F
C372	24538474	PF, 0.47 μ F
C373	24590273	PF, 0.027 μ F
C374	24538474	PF, 0.47 μ F
C402	24353271	CD, 270pF
C403	24636339	EL, 3.3 μ F, 50V
C405	24590203	PF, 0.02 μ F
C406	24590203	PF, 0.02 μ F
C407	24590243	PF, 0.024 μ F
C408	24636100	EL, 10 μ F, 50V
C409	24232103	CD, 0.01 μ F, +80%, -20%
C412	24590182	PF, 1800pF
C413	24590182	PF, 1800pF
C414	24212471	CD, 470pF, $\pm 10\%$
C416	24214271	CD, 270pF, $\pm 10\%$, 500V
C417	24214332	CD, 3300pF, $\pm 10\%$, 500V
C418	24642100	EL, 10 μ F, 160V
△ C440	24095888	PF, 0.01 μ F, $\pm 3\%$, 1600V
C441	24214221	CD, 220pF, $\pm 10\%$, 500V
C443	24214221	CD, 220pF, $\pm 10\%$, 500V
C445	24095903	PF, 0.056 μ F, $\pm 10\%$, 250V
△ C446	24829273	PF, 0.027 μ F, 400V
C447	24644479	EL, 4.7 μ F, 250V
C448	24795102	EL, 1000 μ F, $\pm 20\%$, 25V
C449	24794471	EL, 470 μ F, $\pm 20\%$, 16V

Location No.	Part No.	Description
C451	24640962	EL, 33 μ F, \pm 20%, 200V
△ C463	24212222	CD, 2200pF, \pm 10%
C464	24092346	CD, 1200pF, \pm 10%, 2kV
C465	24095946	PF, 0.43 μ F, 200V
C466	24640933	EL, 1 μ F, \pm 20%, 200V
C502	24636100	EL, 10 μ F, 50V
C503	24436101	CD, 100pF
C504	24436101	CD, 100pF
C505	24590273	PF, 0.027 μ F
C506	24232103	CD, 0.01 μ F, +80%, -20%
C507	24590103	PF, 0.01 μ F
C508	24085028	EL, 2.2 μ F, 25V, Non-Polar
C509	24797220	EL, 22 μ F, \pm 20%, 50V
C510	24232103	CD, 0.01 μ F, +80%, -20%
C511	24232103	CD, 0.01 μ F, +80%, -20%
C512	24353200	CD, 20pF
C513	24353330	CD, 33pF
C515	24636220	EL, 22 μ F, 50V
C516	24590104	PF, 0.1 μ F
C517	24590104	PF, 0.1 μ F
C518	24232103	CD, 0.01 μ F, +80%, -20%
C519	24232103	CD, 0.01 μ F, +80%, -20%
C520	24636478	EL, 0.47 μ F, 50V
C521	24538474	PF, 0.47 μ F
C522	24538474	PF, 0.47 μ F
C523	24538474	PF, 0.47 μ F
C524	24232103	CD, 0.01 μ F, +80%, -20%
C525	24436820	CD, 82pF
C526	24436820	CD, 82pF
C527	24436820	CD, 82pF
C530	24796220	EL, 22 μ F, \pm 20%, 35V
C532	24436300	CD, 30pF
C533	24436330	CD, 33pF
C534	24436200	CD, 20pF
C535	24636100	EL, 10 μ F, 50V
C536	24636478	EL, 0.47 μ F, 50V
C537	24794101	EL, 100 μ F, \pm 20%, 16V
C539	24232103	CD, 0.01 μ F, +80%, -20%
C540	24633100	EL, 10 μ F, 16V
C550	24232103	CD, 0.01 μ F, +80%, -20%
C551	24212102	CD, 1000pF, \pm 10%
C601	24436470	CD, 47pF
C602	24436470	CD, 47pF
C603	24232103	CD, 0.01 μ F, +80%, -20%
C604	24212272	CD, 2700pF, \pm 10%
C605	24232103	CD, 0.01 μ F, +80%, -20%
C606	24353510	CD, 51pF
C607	24232103	CD, 0.01 μ F, +80%, -20%
C608	24353120	CD, 12pF
C609	24232103	CD, 0.01 μ F, +80%, -20%
C610	24232103	CD, 0.01 μ F, +80%, -20%
C611	24232103	CD, 0.01 μ F, +80%, -20%
C613	24232103	CD, 0.01 μ F, +80%, -20%
C614	24232103	CD, 0.01 μ F, +80%, -20%
C615	24633101	EL, 100 μ F, 16V
C651	24093928	Variable Capacitor, 5.2 to 30pF, 100V
C660	24085031	EL, 1 μ F, \pm 20%, 25V, Non-Polar
C661	24636100	EL, 10 μ F, 50V
C662	24636100	EL, 10 μ F, 50V
C663	24797470	EL, 47 μ F, \pm 20%, 50V
C664	24636010	EL, 1 μ F, 50V
C665	24796221	EL, 220 μ F, \pm 20%, 35V

Location No.	Part No.	Description
C666	24590104	PF, 0.1 μ F
C667	24795471	EL, 470 μ F, \pm 20%, 25V
C668	24636478	EL, 0.47 μ F, 50V
C669	24590682	PF, 6800pF
C670	24634220	EL, 22 μ F, 25V
C697	24538224	PF, 0.22 μ F
C698	24636479	EL, 4.7 μ F, 50V
C699	24634470	EL, 47 μ F, 25V
C801	24098999	PF, 0.1 μ F, \pm 20%, AC250V
C802	24098999	PF, 0.1 μ F, \pm 20%, AC250V
C805	24094656	CD, 2200pF, \pm 20%, AC400V
C806	24094656	CD, 2200pF, \pm 20%, AC400V
C815	24092281	CD, 4700pF, \pm 20%, AC250V
C816	24092281	CD, 4700pF, \pm 20%, AC250V
C817	24092281	CD, 4700pF, \pm 20%, AC250V
C818	24092281	CD, 4700pF, \pm 20%, AC250V
C820	24086856	EL, 270 μ F, \pm 20%, 400V
C821	24436101	CD, 100pF
C822	24636100	EL, 10 μ F, 50V
C823	24590682	PF, 6800pF
C824	24630747	EL, 22 μ F, \pm 20%, 25V
C825	24212102	CD, 1000pF, \pm 10%
C826	24442331	CD, 330pF, \pm 10%, 2kV
C827	24232103	CD, 0.01 μ F, +80%, -20%
C828	24095914	PF, 2200pF, \pm 3%, 1600V
C829	24636010	EL, 1 μ F, 50V
C830	24797101	EL, 100 μ F, \pm 20%, 50V
C831	24436331	CD, 330pF
C832	24590822	PF, 8200pF
C833	24442181	CD, 180pF, \pm 10%, 2kV
C834	24086939	EL, 330 μ F, \pm 20%, 200V
C835	24797220	EL, 22 μ F, \pm 20%, 50V
C836	24214331	CD, 330pF, \pm 10%, 500V
C837	24796222	EL, 2200 μ F, \pm 20%, 35V
C838	24795471	EL, 470 μ F, \pm 20%, 25V
C901	24644479	EL, 4.7 μ F, 250V
C902	24095923	PF, 4700pF, 1600V
CA01	24212331	CD, 330pF, \pm 10%
CA07	24212102	CD, 1000pF, \pm 10%
CA08	24232103	CD, 0.01 μ F, +80%, -20%
CA09	24794470	EL, 47 μ F, \pm 20%, 16V
CA10	24232103	CD, 0.01 μ F, +80%, -20%
CA11	24212472	CD, 4700pF, \pm 10%
CA12	24212561	EL, 560pF, \pm 10%
CA13	24633100	EL, 10 μ F, 16V
CA14	24794470	EL, 47 μ F, \pm 20%, 16V
CA15	24232103	CD, 0.01 μ F, +80%, -20%
CA16	24232103	CD, 0.01 μ F, +80%, -20%
CA17	24232103	CD, 0.01 μ F, +80%, -20%
CA18	24232103	CD, 0.01 μ F, +80%, -20%
CA19	24232103	CD, 0.01 μ F, +80%, -20%
CA20	24636010	EL, 1 μ F, 50V
CA21	24436391	CD, 390pF
CA22	24436221	CD, 220pF
CA23	24538104	PF, 0.1 μ F
CA24	24538104	PF, 0.1 μ F
CA25	24636229	EL, 2.2 μ F, 50V
CA26	24232103	CD, 0.01 μ F, +80%, -20%
CA28	24538104	PF, 0.1 μ F
CA30	24636229	EL, 2.2 μ F, 50V
CA31	24232103	CD, 0.01 μ F, +80%, -20%
CA32	24794471	EL, 470 μ F, \pm 20%, 16V
CA33	24232103	CD, 0.01 μ F, +80%, -20%
CA36	24590104	PF, 0.1 μ F

Location No.	Part No.	Description
CA40	24232103	CD, 0.01 μ F, +80%, -20%
CA41	24636229	EL, 2.2 μ F, 50V
CF01	24232103	CD, 0.01 μ F, +80%, -20%
CF02	24636100	EL, 10 μ F, 50V
CF03	24794470	EL, 47 μ F, \pm 20%, 16V
CF04	24085028	EL, 2.2 μ F, 25V, Non-Polar
CF05	24590683	PF, 0.068 μ F
CF06	24436221	CD, 220pF
CF07	24212561	CD, 560pF, \pm 10%
CF08	24590473	PF, 0.047 μ F
CF09	24353180	CD, 18pF
CF11	24590473	PF, 0.047 μ F
CF12	24794470	EL, 47 μ F, \pm 20%, 16V
CF13	24232103	CD, 0.01 μ F, +80%, -20%
CF14	24232103	CD, 0.01 μ F, +80%, -20%
CF15	24436101	CD, 100pF
CF16	24353180	CD, 18pF
CF19	24633100	EL, 10 μ F, 16V
CF20	24436150	CD, 15pF
CF21	24590102	PF, 1000pF
CF22	24212471	CD, 470pF, \pm 10%
CF23	24590223	PF, 0.022 μ F
CF24	24436271	CD, 270pF
CF25	24436101	CD, 100pF
CF26	24353150	CD, 15pF
CF27	24436270	CD, 27pF
CF28	24232103	CD, 0.01 μ F, +80%, -20%
CF81	24633470	EL, 47 μ F, 16V
CF82	24633470	EL, 47 μ F, 16V
CH01	24636010	EL, 1 μ F, 50V
CH02	24636010	EL, 1 μ F, 50V
CH03	24636010	EL, 1 μ F, 50V
CH04	24636010	EL, 1 μ F, 50V
CH05	24636010	EL, 1 μ F, 50V
CH06	24636010	EL, 1 μ F, 50V
CH07	24636100	EL, 10 μ F, 50V
CH10	24232103	CD, 0.01 μ F, +80%, -20%
CH11	24436220	CD, 22pF
CM01	24436221	CD, 220pF
CM02	24436221	CD, 220pF
CM05	24232103	CD, 0.01 μ F, +80%, -20%
CM06	24357270	CD, 27pF
CM07	24590563	PF, 0.056 μ F
CM08	24232103	CD, 0.01 μ F, +80%, -20%
CM10	24436270	CD, 27pF
CN02	24436150	CD, 15pF
CN07	24436360	CD, 36pF
CN10	24436101	CD, 100pF
CV01	24636229	EL, 2.2 μ F, 50V
CV03	24636100	EL, 10 μ F, 50V
CV04	24636229	EL, 2.2 μ F, 50V
CV06	24636100	EL, 10 μ F, 50V
CV07	24636100	EL, 10 μ F, 50V
CV08	24636229	EL, 2.2 μ F, 50V
CV10	24636100	EL, 10 μ F, 50V
CV11	24636229	EL, 2.2 μ F, 50V
CV13	24636100	EL, 10 μ F, 50V
CV15	24636010	EL, 1 μ F, 50V
CV16	24232103	CD, 0.01 μ F, +80%, -20%
CV17	24232103	CD, 0.01 μ F, +80%, -20%
CV18	24633100	EL, 10 μ F, 16V
CV22	24633100	EL, 10 μ F, 16V
CV24	24633471	EL, 470 μ F, 16V
CV27	24633100	EL, 10 μ F, 16V

Location No.	Part No.	Description
CV29	24085028	EL, 2.2 μ F, 25V, Non-Polar
CV31	24633471	EL, 470 μ F, 16V
CX02	24538474	PF, 0.47 μ F
CX03	24538474	PF, 0.47 μ F
CX04	24538474	PF, 0.47 μ F
RESISTORS		
R101	24366152	CF, 1500 ohm
R103	24366152	CF, 1500 ohm
R104	24366103	CF, 10k ohm
R105	24366104	CF, 100k ohm
R106	24366562	CF, 5600 ohm
R107	24366562	CF, 5600 ohm
R108	24366222	CF, 2200 ohm
R109	24366332	CF, 3300 ohm
R110	24366103	CF, 10k ohm
R113	24382560	OMF, 56 ohm, 1W
R115	24366101	CF, 100 ohm
R116	24366102	CF, 1k ohm
R117	24366271	CF, 270 ohm
R118	24552151	OMF, 150 ohm, 1/2W
R122	24366102	CF, 1k ohm
R125	24366101	CF, 100 ohm
R151	24066953	VR, 5k ohm, 1/10W
R152	24066946	VR, 1M ohm, 1/10W
R161	24366131	CF, 130 ohm
R162	24366102	CF, 1k ohm
R163	24366562	CF, 5600 ohm
R164	24552101	OMF, 100 ohm, 1/2W
R166	24366680	CF, 68 ohm
R167	24366470	CF, 47 ohm
R168	24366562	CF, 5600 ohm
R171	24366102	CF, 1k ohm
R172	24366184	CF, 180k ohm
R202	24366101	CF, 100 ohm
R203	24366182	CF, 1800 ohm
R204	24366152	CF, 1500 ohm
R205	24366392	CF, 3900 ohm
R208	24366101	CF, 100 ohm
R209	24366103	CF, 10k ohm
R210	24366203	CF, 20k ohm
R211	24366622	CF, 6200 ohm
R212	24366103	CF, 10k ohm
R213	24366101	CF, 100 ohm
R214	24366182	CF, 1800 ohm
R215	24366152	CF, 1500 ohm
R216	24366333	CF, 33k ohm
R217	24366101	CF, 100 ohm
R218	24366472	CF, 4700 ohm
R219	24366472	CF, 4700 ohm
R220	24366753	CF, 75k ohm
R221	24366564	CF, 560k ohm
R222	24366751	CF, 750 ohm
R223	24366103	CF, 10k ohm
R224	24366333	CF, 33k ohm
R225	24366132	CF, 1300 ohm
R226	24366104	CF, 100k ohm
R227	24366105	CF, 1M ohm
R228	24366104	CF, 100k ohm
R229	24366303	CF, 30k ohm
R230	24366102	CF, 1k ohm
R231	24366103	CF, 10k ohm
R232	24366473	CF, 47k ohm
R233	24366302	CF, 3k ohm

Location No.	Part No.	Description
R234	24366102	CF, 1k ohm
R235	24366473	CF, 47k ohm
R236	24366103	CF, 10k ohm
R237	24366224	CF, 220k ohm
R241	24366101	CF, 100 ohm
R242	24366912	CF, 9100 ohm
R243	24366183	CF, 18k ohm
R252	24066598	VR, 2k ohm, 1/10W
R253	24066598	VR, 2k ohm, 1/10W
R255	24066601	VR, 20k ohm, 1/10W
R301	24366131	CF, 130 ohm
R302	24366244	CF, 240k ohm
R303	24366203	CF, 20k ohm
R304	24366102	CF, 1k ohm
R305	24366161	CF, 160 ohm
R306	24366471	CF, 470 ohm
R309	24366102	CF, 1k ohm
R311	24552242	OMF, 2400 ohm, 1/2W
R312	24366203	CF, 20k ohm
R316	24552561	OMF, 560 ohm, 1/2W
△ R317	24383271	OMF, 270 ohm, 2W
R318	24366203	CF, 20k ohm
R321	24366183	CF, 18k ohm
R322	24366754	CF, 750k ohm
R323	24322828	OMF, 0.82 ohm, 1W
R325	24552122	OMF, 1200 ohm, 1/2W
△ R327	24556339	FR, 3.3 ohm, $\pm 10\%$, 1/2W
R328	24322479	OMF, 4.7 ohm, 1W
R329	24381472	OMF, 4700 ohm, 1/2W
R333	24366471	CF, 470 ohm
R335	24552561	OMF, 560 ohm, 1/2W
R351	24066602	VR, 50k ohm, 1/10W
R356	24066926	VR, 10k ohm, 1/10W
R357	24066921	VR, 500k ohm, 1/10W
R358	24066928	VR, 2k ohm, 1/10W
R361	24367243	CF, 24k ohm, $\pm 2\%$
R362	24367682	CF, 560 ohm, $\pm 2\%$
R363	24367223	CF, 22k ohm, $\pm 2\%$
R364	24366823	CF, 82k ohm
R366	24366473	CF, 47k ohm
R367	24366104	CF, 100k ohm
R369	24552682	OMF, 6800 ohm, 1/2W
R370	24366682	CF, 6800 ohm
R371	24367243	CF, 24k ohm, $\pm 2\%$
R372	24003984	MF, 1k ohm, 1/4W
R375	24366182	CF, 1800 ohm
R376	24366102	CF, 1k ohm
R377	24366184	CF, 180k ohm
R378	24366364	CF, 360k ohm
R380	24366153	CF, 15k ohm
R384	24366103	CF, 10k ohm
R386	24322479	OMF, 4.7 ohm, 1W
R387	24366474	CF, 470k ohm
R390	24366155	CF, 1.5M ohm
R391	24366155	CF, 1.5M ohm
R402	24366273	CF, 27k ohm
R403	24366302	CF, 3k ohm
R404	24381432	OMF, 4300 ohm, 1/2W
R405	24366511	CF, 510 ohm
R407	24366161	CF, 160 ohm
R408	24366682	CF, 6800 ohm
R411	24366361	CF, 360 ohm
R412	24366221	CF, 220 ohm
△ R416	24007620	Cement, 4300 ohm, 5W

Location No.	Part No.	Description
R418	24382432	OMF, 4300 ohm, 1W
R419	24366510	CF, 51 ohm
R420	24553102	OMF, 1k ohm, 1W
R421	24366105	CF, 1M ohm
R440	24376243	CF, 24k ohm, 1/2W
R441	24552103	OMF, 10k ohm, 1/2W
△ R446	24532151	FR, 150 ohm, 1W
△ R448	24984279	MF, 2.7 ohm, 2W
R451	24066601	VR, 20k ohm, 1/10W
R452	24069547	VR, 5k ohm, 0.08W, CC
R501	24366821	CF, 820 ohm
R502	24366334	CF, 330k ohm
R503	24366202	CF, 2k ohm
R504	24366391	CF, 390 ohm
R505	24366822	CF, 8200 ohm
R507	24366822	CF, 8200 ohm
R508	24366821	CF, 820 ohm
R509	24366203	CF, 20k ohm
R510	24366101	CF, 100 ohm
R511	24366562	CF, 5600 ohm
R512	24366152	CF, 1500 ohm
R513	24366152	CF, 1500 ohm
R515	24366221	CF, 220 ohm
R516	24366221	CF, 220 ohm
R517	24366221	CF, 220 ohm
R521	24366562	CF, 5600 ohm
R522	24360185	CF, 1.8M ohm, 1/8W
R523	24366102	CF, 1k ohm
R524	24366103	CF, 10k ohm
R525	24366103	CF, 10k ohm
R526	24366122	CF, 1200 ohm
R527	24366122	CF, 1200 ohm
△ R529	24007642	Cement, 5600 ohm, 5W
R531	24366102	CF, 1k ohm
R532	24366302	CF, 3k ohm
R533	24366132	CF, 1300 ohm
R534	24376104	CF, 100k ohm, 1/2W
R535	24366392	CF, 3900 ohm
R536	24376104	CF, 100k ohm, 1/2W
R537	24366132	CF, 1300 ohm
R538	24366392	CF, 3900 ohm
R539	24366132	CF, 1300 ohm
R540	24376104	CF, 100k ohm, 1/2W
R541	24366821	CF, 820 ohm
R542	24366271	CF, 270 ohm
R543	24366512	CF, 5100 ohm
R544	24366101	CF, 100 ohm
R545	24366101	CF, 100 ohm
R547	24366471	CF, 470 ohm
R548	24366471	CF, 470 ohm
R549	24366471	CF, 470 ohm
R551	24066955	VR, 1k ohm, 1/10W
R557	24066598	VR, 2k ohm, 1/10W
R558	24066598	VR, 2k ohm, 1/10W
R559	24066598	VR, 2k ohm, 1/10W
R564	24366101	CF, 100 ohm
R565	24366101	CF, 100 ohm
R567	24366101	CF, 100 ohm
R570	24366912	CF, 9100 ohm
R571	24366912	CF, 9100 ohm
R572	24366912	CF, 9100 ohm
R573	24366104	CF, 100k ohm
△ R591	24383153	OMF, 15k ohm, 2W
△ R592	24383153	OMF, 15k ohm, 2W

Location No.	Part No.	Description
△ R593	24383153	OMF, 15k ohm, 2W
R601	24366471	CF, 470 ohm
R602	24366563	CF, 56k ohm
R603	24366563	CF, 56k ohm
R604	24366102	CF, 1k ohm
R605	24366471	CF, 470 ohm
R606	24366471	CF, 470 ohm
R607	24366472	CF, 4700 ohm
R608	24366183	CF, 18k ohm
R609	24366103	CF, 10k ohm
R610	24366124	CF, 120k ohm
R611	24366103	CF, 10k ohm
R612	24366332	CF, 3300 ohm
R613	24366562	CF, 5600 ohm
R614	24366152	CF, 1500 ohm
R615	24366562	CF, 5600 ohm
R616	24366223	CF, 22k ohm
R618	24366101	CF, 100 ohm
R619	24366222	CF, 2200 ohm
R621	24366562	CF, 5600 ohm
R623	24366562	CF, 5600 ohm
R624	24366103	CF, 10k ohm
R625	24366562	CF, 5600 ohm
R660	24366102	CF, 1k ohm
R661	24366332	CF, 3300 ohm
R662	24552181	OMF, 180 ohm, 1/2W
△ R663	24533110	FR, 11 ohm, 2W
R664	24366103	CF, 10k ohm
R665	24366339	CF, 3.3 ohm
R666	24366752	CF, 7500 ohm
R667	24366105	CF, 1M ohm
R668	24366152	CF, 1500 ohm
R684	24552331	OMF, 330 ohm, 1/2W
R690	24366273	CF, 27k ohm
R691	24366223	CF, 22k ohm
R692	24366104	CF, 100k ohm
R693	24366103	CF, 10k ohm
R694	24366152	CF, 1500 ohm
R695	24366222	CF, 2200 ohm
R696	24366223	CF, 22k ohm
R699	24366332	CF, 3300 ohm
R801	24004914	CC, 5.6M ohm, 1/2W
△ R802	24007932	Cement, 6.2 ohm, 10W
R810	24377334	CF, 330k ohm, 1W
△ R813	24556109	FR, 1 ohm, ±10%, 1/2W
R814	24366823	CF, 82k ohm
R815	24366221	CF, 220 ohm
R816	24367122	CF, 1200 ohm, ±2%
R817	24321398	OMF, 0.39 ohm, 1/2W
△ R818	24384203	OMF, 20k ohm, 3W
R819	24366689	CF, 6.8 ohm
R820	24366102	CF, 1k ohm
△ R821	24007778	Cement, 180 ohm, 7W
R822	24366390	CF, 39 ohm
R823	24367822	CF, 8200 ohm, ±2%
R824	24366123	CF, 12k ohm
R825	24531620	FR, 62 ohm, 1/2W
△ R826	24007552	Cement, 8200 ohm, 5W
R828	24366102	CF, 1k ohm
R829	24382473	OMF, 47k ohm, 1W
R830	24366272	CF, 2700 ohm
R831	24366103	CF, 10k ohm
R836	24004945	MF, 0.18 ohm, 1W
△ R837	24000900	FR, 0.47 ohm, ±10%, 1W

Location No.	Part No.	Description
R838	24366392	CF, 3900 ohm
R851	24066954	VR, 2k ohm, 1/10W
△ R890	24000630	PTC Thermistor, Dual
R901	24946272	CC, 2700 ohm, ±10%, 1/2W
R902	24946272	CC, 2700 ohm, ±10%, 1/2W
R903	24946272	CC, 2700 ohm, ±10%, 1/2W
△ R920	24000961	FR, 2.2 ohm, 2W
RA01	24366102	CF, 1k ohm
RA04	24366103	CF, 10k ohm
RA05	24366101	CF, 100 ohm
RA06	24366101	CF, 100 ohm
RA07	24366101	CF, 100 ohm
RA08	24366102	CF, 1k ohm
RA09	24366103	CF, 10k ohm
RA10	24366102	CF, 1k ohm
RA11	24366472	CF, 4700 ohm
RA12	24366101	CF, 100 ohm
RA13	24366472	CF, 4700 ohm
RA14	24366102	CF, 1k ohm
RA17	24366102	CF, 1k ohm
RA19	24366103	CF, 10k ohm
RA20	24366102	CF, 1k ohm
RA21	24366102	CF, 1k ohm
RA22	24366103	CF, 10k ohm
RA23	24366471	CF, 470 ohm
RA24	24366102	CF, 1k ohm
RA25	24366103	CF, 10k ohm
RA27	24366392	CF, 3900 ohm
RA28	24366471	CF, 470 ohm
RA30	24366271	CF, 270 ohm
RA31	24366102	CF, 1k ohm
RA33	24366103	CF, 10k ohm
RA35	24366103	CF, 10k ohm
RA36	24366102	CF, 1k ohm
RA37	24366102	CF, 1k ohm
RA38	24366153	CF, 15k ohm
RA39	24366153	CF, 15k ohm
RA40	24366473	CF, 47k ohm
RA41	24366153	CF, 15k ohm
RA42	24366473	CF, 47k ohm
RA43	24366153	CF, 15k ohm
RA44	24366102	CF, 1k ohm
RA45	24366223	CF, 22k ohm
RA46	24366333	CF, 33k ohm
RA48	24366333	CF, 33k ohm
RA49	24366333	CF, 33k ohm
RA60	24366333	CF, 33k ohm
RA61	24360225	CF, 2.2M ohm, 1/8W
RA62	24366223	CF, 22k ohm
RA64	24946226	CC, 22M ohm, ±10%, 1/2W
RA65	24366223	CF, 22k ohm
RA67	24366273	CF, 27k ohm
RA68	24366123	CF, 12k ohm
RA69	24366823	CF, 82k ohm
RA70	24366153	CF, 15k ohm
RA73	24366223	CF, 22k ohm
RA74	24366223	CF, 22k ohm
RA75	24366102	CF, 1k ohm
RA78	24366103	CF, 10k ohm
RA79	24366152	CF, 1500 ohm
RA86	24366392	CF, 3900 ohm
RA87	24366103	CF, 10k ohm
RA88	24366102	CF, 1k ohm
RA90	24366103	CF, 10k ohm

Location No.	Part No.	Description
RA91	24366102	CF, 1k ohm
△ RA97	24383103	OMF, 10k ohm, 2W
RA98	24366333	CF, 33k ohm
RA99	24366224	CF, 220k ohm
RB01	24366333	CF, 33k ohm
RB03	24366103	CF, 10k ohm
RB04	24366103	CF, 10k ohm
RB05	24366332	CF, 3300 ohm
RB06	24366473	CF, 47k ohm
RC06	24366222	CF, 2200 ohm
RC08	24366222	CF, 2200 ohm
RF01	24366101	CF, 100 ohm
RF02	24366152	CF, 1500 ohm
RF03	24366472	CF, 4700 ohm
RF04	24366472	CF, 4700 ohm
RF05	24366223	CF, 22k ohm
RF06	24366152	CF, 1500 ohm
RF07	24366102	CF, 1k ohm
RF08	24366152	CF, 1500 ohm
RF09	24366473	CF, 47k ohm
RF10	24366152	CF, 1500 ohm
RF11	24366683	CF, 68k ohm
RF12	24366102	CF, 1k ohm
RF13	24366102	CF, 1k ohm
RF14	24366122	CF, 1200 ohm
RF15	24366102	CF, 1k ohm
RF16	24366331	CF, 330 ohm
RF17	24366102	CF, 1k ohm
RF18	24366102	CF, 1k ohm
RF19	24366105	CF, 1M ohm
RF20	24366331	CF, 330 ohm
RF21	24366223	CF, 22k ohm
RF22	24366223	CF, 22k ohm
RF23	24366223	CF, 22k ohm
RF24	24366332	CF, 3300 ohm
RF25	24366103	CF, 10k ohm
RF26	24366103	CF, 10k ohm
RF27	24366103	CF, 10k ohm
RF28	24366102	CF, 1k ohm
RF29	24366471	CF, 470 ohm
△ RF80	24531100	FR, 10 ohm, 1/2W
△ RF81	24383153	OMF, 15k ohm, 2W
△ RF83	24531100	FR, 10 ohm, 1/2W
RF84	24366122	CF, 1200 ohm
RH01	24366102	CF, 1k ohm
RH02	24366152	CF, 1500 ohm
RH03	24366102	CF, 1k ohm
RH04	24366102	CF, 1k ohm
RH05	24366102	CF, 1k ohm
RH06	24366153	CF, 15k ohm
RH07	24366181	CF, 180 ohm
RH08	24366153	CF, 15k ohm
RH09	24366181	CF, 180 ohm
RH10	24366153	CF, 15k ohm
RH11	24366181	CF, 180 ohm
RH12	24366102	CF, 1k ohm
RH32	24366332	CF, 3300 ohm
RH33	24366103	CF, 10k ohm
RM03	24366182	CF, 1800 ohm
RM04	24366242	CF, 2400 ohm
RM05	24366221	CF, 220 ohm
RM06	24366471	CF, 470 ohm
RN02	24366102	CF, 1k ohm
RN05	24366392	CF, 3900 ohm

Location No.	Part No.	Description
RN08	24366103	CF, 10k ohm
RR01	24366102	CF, 1k ohm
RR06	24366471	CF, 470 ohm
RV01	24366821	CF, 820 ohm
RV02	24366132	CF, 1300 ohm
RV03	24366102	CF, 1k ohm
RV05	24366101	CF, 100 ohm
RV06	24366101	CF, 100 ohm
RV07	24366102	CF, 1k ohm
RV09	24366101	CF, 100 ohm
RV10	24366102	CF, 1k ohm
RV12	24366101	CF, 100 ohm
RV13	24366103	CF, 10k ohm
RV14	24366103	CF, 10k ohm
RV15	24366101	CF, 100 ohm
RV16	24366473	CF, 47k ohm
RV17	24366473	CF, 47k ohm
RV18	24366332	CF, 3300 ohm
RV19	24366222	CF, 2200 ohm
RV20	24366101	CF, 100 ohm
RV22	24366332	CF, 3300 ohm
RV23	24366473	CF, 47k ohm
RV24	24552750	OMF, 75 ohm, 1/2W
RV25	24366331	CF, 330 ohm
RV26	24366391	CF, 390 ohm
RV27	24366473	CF, 47k ohm
RV28	24366473	CF, 47k ohm
RV29	24366472	CF, 4700 ohm
RV30	24366102	CF, 1k ohm
RV31	24366910	CF, 91 ohm
RV32	24366820	CF, 82 ohm
RV33	24366332	CF, 3300 ohm
RV34	24366473	CF, 47k ohm
RV36	24366104	CF, 100k ohm
RV37	24366473	CF, 47k ohm
RV39	24366910	CF, 91 ohm
RV40	24366560	CF, 56 ohm
RV41	24366103	CF, 10k ohm
RV42	24366750	CF, 75 ohm
RV43	24366510	CF, 51 ohm
RV44	24366510	CF, 51 ohm
RV45	24366510	CF, 51 ohm
RV46	24366101	CF, 100 ohm
RV47	24366104	CF, 100k ohm
RV48	24366102	CF, 1k ohm
RV49	24366102	CF, 1k ohm
RV60	24366220	CF, 22 ohm
RV61	24366220	CF, 22 ohm
RV62	24366220	CF, 22 ohm
RV63	24366562	CF, 5600 ohm
RV64	24366562	CF, 5600 ohm
RV65	24366104	CF, 100k ohm
RV66	24366562	CF, 5600 ohm
RV67	24366562	CF, 5600 ohm
RV68	24366471	CF, 470 ohm
RV69	24366223	CF, 22k ohm
RV70	24366273	CF, 27k ohm
RV71	24366102	CF, 1k ohm
RV72	24366103	CF, 10k ohm
RV73	24366560	CF, 56 ohm
RX02	24366102	CF, 1k ohm
RX05	24366101	CF, 100 ohm
RX08	24366101	CF, 100 ohm
RX10	24366101	CF, 100 ohm

Location No.	Part No.	Description
RX13	24366102	CF, 1k ohm
COILS & TRANSFORMERS		
L102	23262819	Coil, PIF, TRF1071D
L103	23237987	Coil, Peaking, TRF4100AC
L105	23237993	Coil, Peaking, TRF4339AC
L107	23237988	Coil, Peaking, TRF4829AC
L108	23237993	Coil, Peaking, TRF4339AC
L151	23262813	Coil, IF, TRF1077D
L152	23262813	Coil, IF, TRF1077D
L162	23201004	Coil, RF Choke, TRF9202B
L201	23237974	Coil, Peaking, TRF4121AC
L311	23103901	Coil (Ferrite Bead), TEM2017
L315	23237987	Coil, Peaking, TRF4100AC
L362	23211896	Coil, Choke, AT4043/60T
L363	23211897	Coil, Choke, AT4043/100T
L406	23103859	Coil (Ferrite Bead), TEM2011
L414	23221936	Coil, Choke, TLN3041
L441	23238934	Coil, Peaking, TRF4109AC
△ L462	DY, Supplied with V901
L503	23237987	Coil, Peaking, TRF4100AC
L551	23250972	Coil, 1H-Delay Matching, TRF5418D
L590	23289221	Coil, Peaking, TRF4221AF
L601	23237986	Coil, Peaking, TRF4120AC
L651	23232946	Coil, Variable, TRF3073D
L801	23221050	Coil, RF Choke, TLN1015
L802	23103859	Coil (Ferrite Bead), TEM2011
L803	23221747	Coil, Choke, TRF9253D
L804	23221747	Coil, Choke, TRF9253D
L805	23222694	Coil, Width, TLN2026
L806	23103859	Coil (Ferrite Bead), TEM2011
L807	23222694	Coil, Width, TLN2026
△ L901	23200749	Coil, Degaussing, TSB2247
LA01	23238934	Coil, Peaking, TRF4109AC
LA02	23221803	Coil, Choke, TLN3040D
LB01	23262778	Coil, IF, TRF1112
LF01	23238934	Coil, Peaking, TRF4109AC
LF02	23238920	Coil, Peaking, TRF4150AC
LF03	23238934	Coil, Peaking, TRF4109AC
LM01	23262797	Coil, IF, TRF1093D
LM02	23250865	Coil, IF, TRF5414DA
LM03	23250865	Coil, IF, TRF5414DA
LM04	23262798	Coil, IF, TRF1092D
LN02	23237985	Coil, Peaking, TRF4150AC
△ T401	23224997	Transformer, Horiz. Drive, TLN1027
△ T461	23236089	Transformer, Flyback, G4298
T801	23211875	Line Filter, TRF3157
T803	23217074	Transformer, Converter, 47003593
SEMICONDUCTORS		
IC101	23318201	IC, T51496P
IC303	23119142	IC, AN5521
IC361	23318231	IC, TEA2031A
IC408	23318218	IC, μ PC7812H
IC501	B0379475	IC, TA8659AN
IC660	23318392	IC, AN5262
IC661	23119668	IC, TDA2611A
IC801	23318232	IC, TDA4601
IC807	23318299	IC, L78MR05-FA
ICA01	23319011	IC, M34300-584SP

Location No.	Part No.	Description
ICA02	23318482	IC, M6M80011AP
ICA04	23119441	IC, LA7910
ICF01	23318097	IC, SAA5231
ICF02	23318442	IC, SAA5243P/H
ICF03	23319001	IC, IMS1630LP12
ICF04	23319014	IC, MC68HC05C8B
ICH01	23119139	IC, AN5862K
ICV01	B0383505	IC, TA8720AN
Q103	23114691	Transistor, BC557A
Q104	23114689	Transistor, BC547A
Q161	A6708871	Transistor, 2SC388ATM
Q201	23114689	Transistor, BC547A
Q202	23114691	Transistor, BC557A
Q203	23114689	Transistor, BC547A
Q204	A6041876	Transistor, 2SK117-GR FA-2
Q205	A6342200	Transistor, 2SC2878-A
Q206	23114689	Transistor, BC547A
Q362	23114689	Transistor, BC547A
Q363	23114689	Transistor, BC547A
Q364	23114689	Transistor, BC547A
Q402	A678971D	Transistor, 2SC1569 FA-5
△ Q404	23314376	Transistor, ON4408
Q502	23114691	Transistor, BC557A
Q503	23114691	Transistor, BC557A
Q505	23114693	Transistor, BF871
Q506	23114689	Transistor, BC547A
Q507	23114693	Transistor, BF871
Q508	23114689	Transistor, BC547A
Q509	23114693	Transistor, BF871
Q510	23114689	Transistor, BC547A
Q514	23114688	Transistor, BC327
Q516	23114689	Transistor, BC547A
Q602	23114689	Transistor, BC547A
Q603	23114689	Transistor, BC547A
Q605	23114689	Transistor, BC547A
Q697	23114689	Transistor, BC547A
Q698	A6342200	Transistor, 2SC2878-A
Q699	23114691	Transistor, BC557A
Q802	23314376	Transistor, ON4408
Q803	23314246	Transistor, 2SC2023 LF-4
Q804	A6547303	Transistor, 2SA1321
Q805	A6325067	Transistor, 2SC2230A-Y
Q806	23114546	Transistor, BC557B
QA05	23114689	Transistor, BC547A
QA06	23114689	Transistor, BC547A
QA07	23114689	Transistor, BC547A
QA09	23114691	Transistor, BC557A
QA10	23114689	Transistor, BC547A
QA11	23114546	Transistor, BC557B
QB01	23114689	Transistor, BC547A
QB02	23114689	Transistor, BC547A
QF06	23114689	Transistor, BC547A
QF07	23114689	Transistor, BC547A
QF08	A6734590	Transistor, 2SC752(G)TM-Y
QF09	A6734590	Transistor, 2SC752(G)TM-Y
QF10	A6734590	Transistor, 2SC752(G)TM-Y
QF80	23314374	Transistor, BD945
QF81	23314374	Transistor, BD945
QH03	23114689	Transistor, BC547A
QH04	23114689	Transistor, BC547A
QH05	23114689	Transistor, BC547A
QV02	23114691	Transistor, BC557A
QV03	23114689	Transistor, BC547A
QV05	23114689	Transistor, BC547A


Location No.	Part No.	Description
QV06	23114689	Transistor, BC547A
QV07	23114689	Transistor, BC547A
QV09	23114632	Transistor, BC547B
QV10	23114689	Transistor, BC547A
QV11	A6342200	Transistor, 2SC2878-A
D201	23115599	Diode, 1N4148
D202	23115599	Diode, 1N4148
D241	A7150041	Diode, 1SS104
D302	23118479	Diode, BYD33J
D305	23118479	Diode, BYD33J
D314	A7117205	Diode, Zener, 04AZ12X
D315	A7116715	Diode, Zener, 04AZ7.5Y
D361	A7117705	Diode, Zener, 04AZ20X
D362	23115599	Diode, 1N4148
D363	23118633	Diode, Zener, RD3.0ES-B2
D366	23115599	Diode, 1N4148
D367	23115599	Diode, 1N4148
D368	A7118135	Diode, Zener, 04AZ30R
D401	A7116925	Diode, Zener, 04AZ9.1Z
D402	A7117715	Diode, Zener, 04AZ20Y
D403	A7117215	Diode, Zener, 04AZ12Y
D406	23118479	Diode, BYD33J
D408	23118052	Diode, RU4Z
D410	A7116815	Diode, Zener, 04AZ8.2Y
D440	23118995	Diode, BY228
D441	23118994	Diode, BYW95C
D593	23115599	Diode, 1N4148
D594	23115599	Diode, 1N4148
D595	23115599	Diode, 1N4148
D601	A7288601	Diode, 1S2186 FA-1
D602	A7288601	Diode, 1S2186 FA-1
D660	23115599	Diode, 1N4148
D696	23115599	Diode, 1N4148
D697	23115599	Diode, 1N4148
D698	23115599	Diode, 1N4148
D699	23115599	Diode, 1N4148
D803	23118173	Diode, RBV-406M-LFA
D805	23118479	Diode, BYD33J
D806	23118479	Diode, BYD33J
D807	23118479	Diode, BYD33J
D808	23118736	Diode, BYV96E
D809	23118451	Diode, RU4A
D810	23118052	Diode, RU4Z
D811	23118479	Diode, BYD33J
D812	A7116515	Diode, Zener, 04AZ6.2Y
D813	23118479	Diode, BYD33J
DA04	23115599	Diode, 1N4148
DA12	23115599	Diode, 1N4148
DA15	23115599	Diode, 1N4148
DA16	23115599	Diode, 1N4148
DA17	23115599	Diode, 1N4148
DA20	23115599	Diode, 1N4148
DA21	23115599	Diode, 1N4148
DA22	23115599	Diode, 1N4148
DA30	23115878	Diode, Zener, μ PC574J(L)
DA31	23115599	Diode, 1N4148
DA33	23115599	Diode, 1N4148
DA34	23115599	Diode, 1N4148
DE40	23118969	Diode (LED), MV57124, Red
DE41	23318436	Diode (LED), MV53124A, Yellow
DF01	23115599	Diode, 1N4148
DF02	23115599	Diode, 1N4148
DF03	23115599	Diode, 1N4148

Location No.	Part No.	Description
DF80	A7117305	Diode, Zener, 04AZ13X
DF81	A7116415	Diode, Zener, 04AZ5.6Y
DH01	23115599	Diode, 1N4148
DH02	23115599	Diode, 1N4148
DH03	23115599	Diode, 1N4148
DH04	23115599	Diode, 1N4148
DH05	23115599	Diode, 1N4148
DH06	23115599	Diode, 1N4148
DH07	A7116215	Diode, Zener, 04AZ4.7Y
DH08	23115599	Diode, 1N4148
DH11	23115599	Diode, 1N4148
DH12	23115599	Diode, 1N4148
DV01	A7116915	Diode, Zener, 04AZ9.1Y
DV02	23115599	Diode, 1N4148
DV03	A7116215	Diode, Zener, 04AZ4.7Y
MISCELLANEOUS		
△ F801	23144896	Fuse, 2.0A
F801A	23165102	Fuse Holder
△ F802	23144876	Fuse, 0.5A
F802A	23165102	Fuse Holder
K901	23120303	Remote Sensor, IR-9109-K
P661	23365432	Earphone Jack
△ P801	23176959	Power Cord
PF01	23367684	Plug, 11P
PF02	23367677	Plug, 4P
PH01	23365598	21 Pin Connector
PH02	23365598	21 Pin Connector
PV01	23365515	Jack, 4P
PV02	23365428	Jack Phono, 2P
S202	23145542	Switch, Lever, 1C3P
S301	23145682	Switch, Lever, 1C3P
△ S801	23145434	Switch, Power, 2C2P
SA01	23145430	Switch, Push, 1C1P
SA02	23145430	Switch, Push, 1C1P
SA03	23145430	Switch, Push, 1C1P
SA04	23145430	Switch, Push, 1C1P
△ V901A	23902353	Socket, CRT, 10P
W201	23250884	Delay Line, TRF2084B
W661	23351031	Speaker, SPK-1306, 60x70mm, 16 ohm
W662	23351031	Speaker, SPK-1306, 60x70mm, 16 ohm
X401	23153886	Ceramic Resonator, 503kHz, TCR1012
X501	23153979	Crystal, 4.43MHz
X502	23250950	Coil, 1H-Delay Line, DL711
XF01	23153657	Crystal, 13.875MHz
XF02	23153924	Crystal, 6.0MHz
XF03	23153741	Ceramic Resonator, TCR1029
Z101	A5611320	PIF SAW Filter, F1057
Z102	23107915	Ceramic Video Trap, 5.5 to 5.7MHz, TCF1017
Z103	23107913	Ceramic Video Trap, 6.5MHz, TCF1018
Z602	23107949	Ceramic Filter, 6.5MHz, SFE6.5MBF
Z603	23107947	Ceramic Filter, 5.5MHz, SFE5.5MBF
ZA01	23153741	Ceramic Resonator, TCR1029
ZA02	24000788	Resistor Block, 4700 ohmx4, 1/8W
ZA03	24094651	Capacitor Block, 100pFx4, 50V

Location No.	Part No.	Description
--------------	----------	-------------


**THIS PAGE IS
INTENTIONALLY LEFT
BLANK.**

MAIN BOARD PB0991

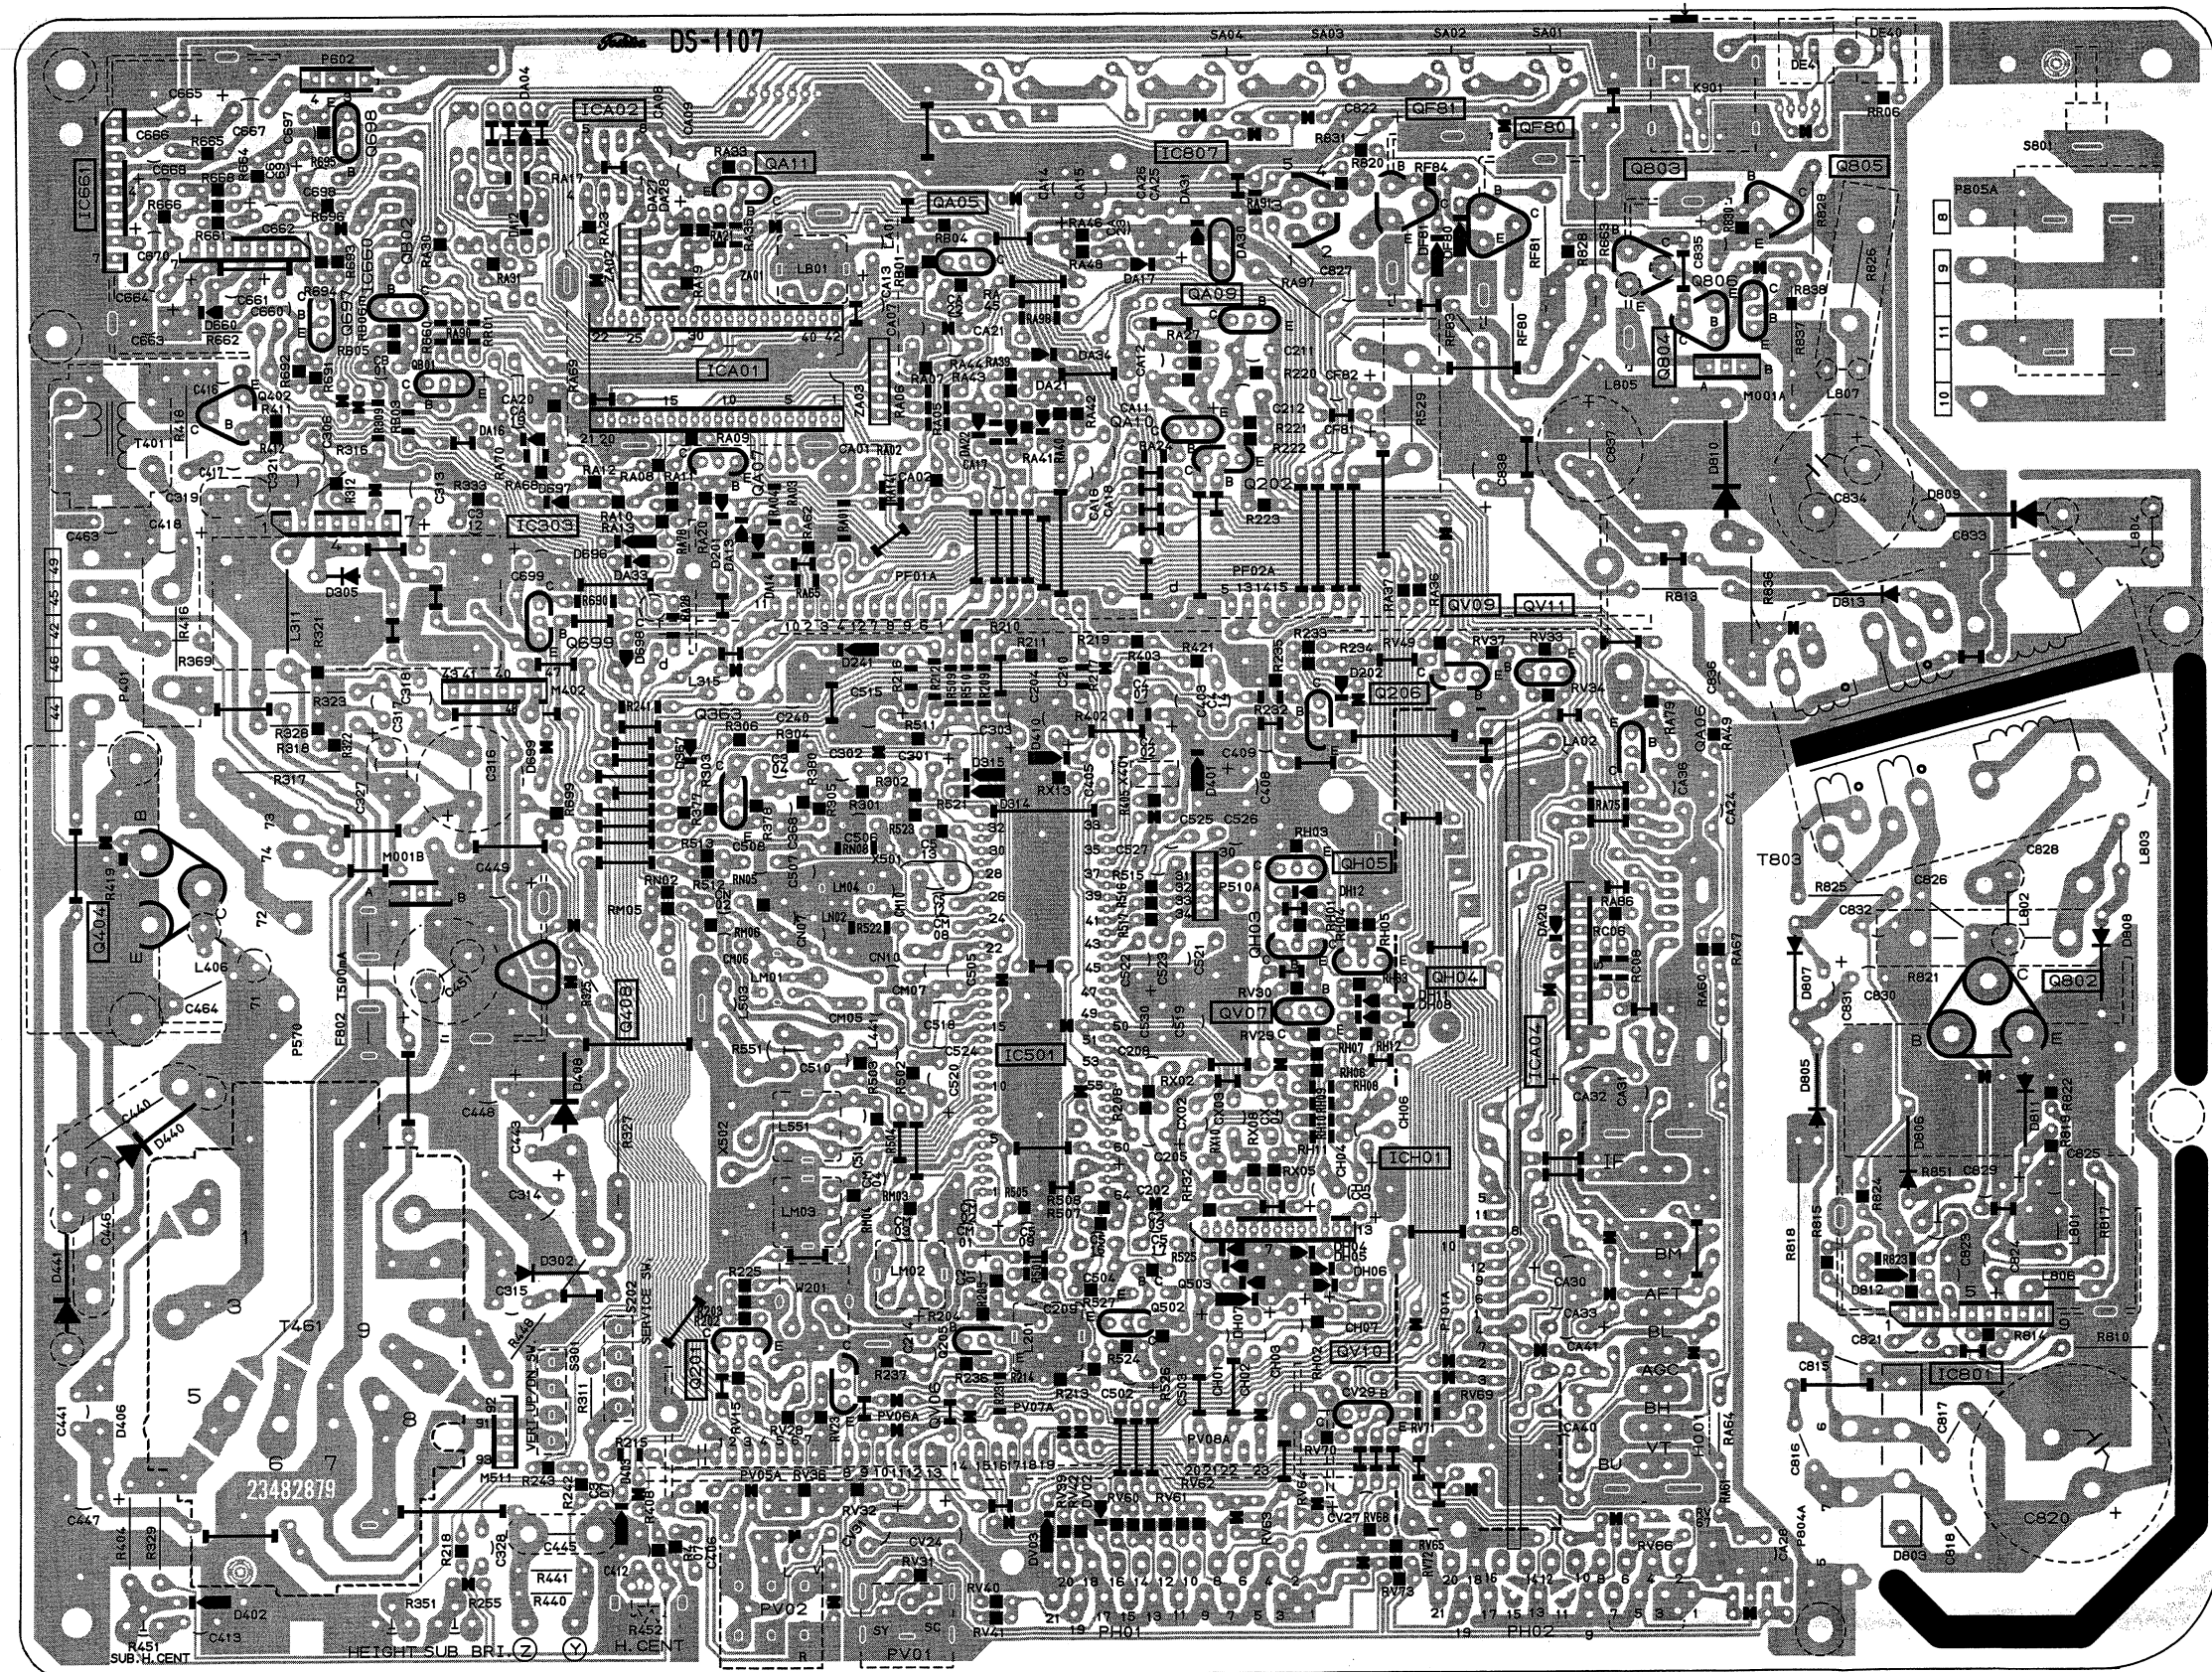


PIF BOARD PB0990-1

BOTTOM (FOIL) SIDE

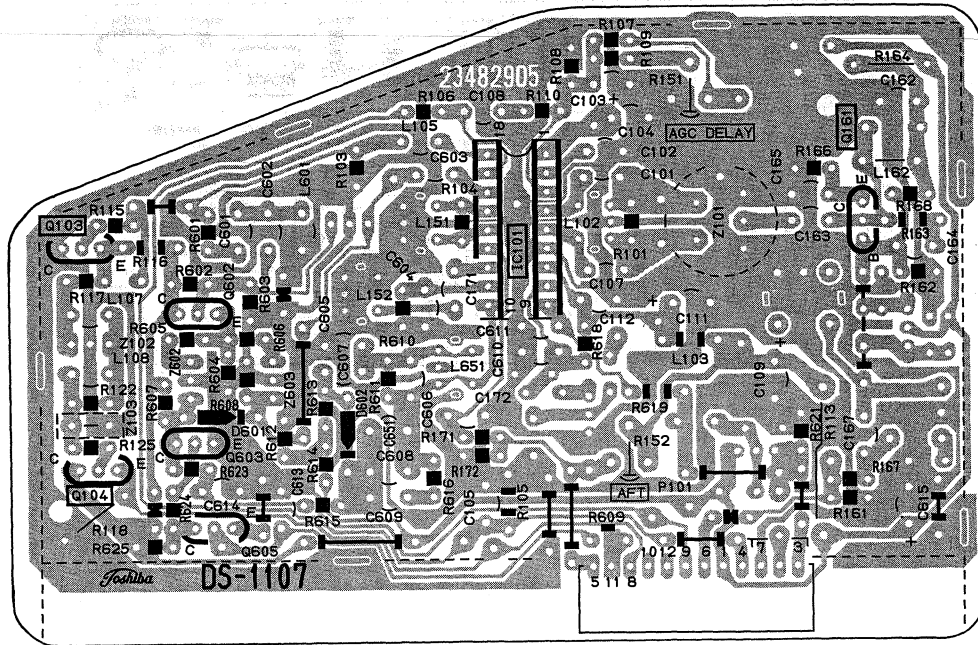


TEXT BOARD PB0990-2

BOTTOM (FOIL) SIDE

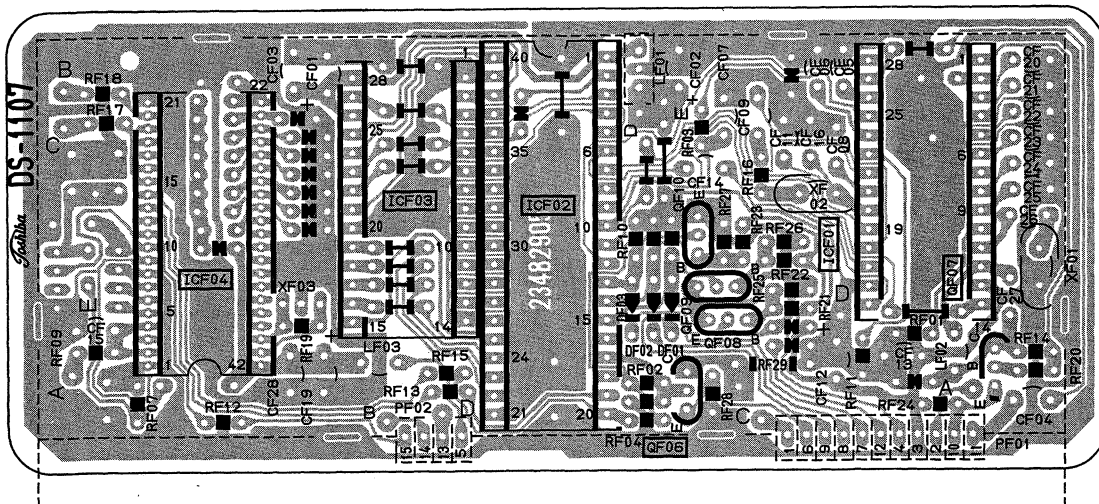


A/V SW BOARD PB0990-3

BOTTOM (FOIL) SIDE

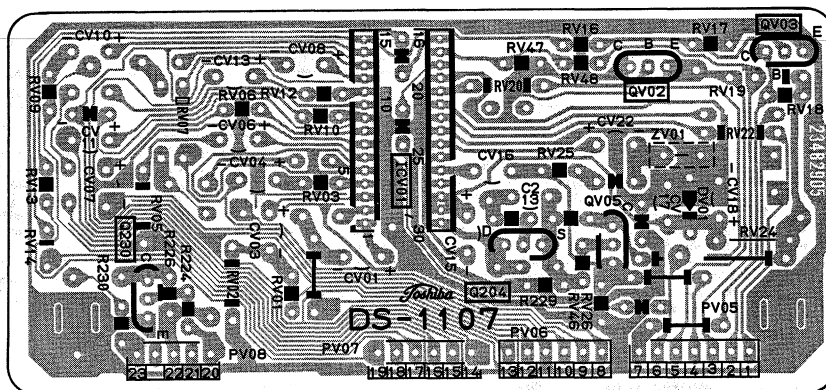

TERMINAL VIEW OF TRANSISTORS


- ① BC327
BC337
BC547A
BC547B
BC547C
BC557A
BC557B
BC556A




- ② 2SK30ATM
2SK117




- ③ BD202




- ④ BF871
2SD553
2SC1569




- ⑤ 2SC3678
2SC3182N




- ⑥ 2SD1427
2SD1432




- ⑦ 2SC2482
2SA1321
2SC2230
2SA1020
2SC2655
2SC752GTM




- ⑧ 2SC388ATM
2SA1015
2SC1959
2SA562TM




- ⑨ 2SD1548



- ⑩ 2SC2023



- ⑪ ON4408
ON4409




MEMO


Handwritten notes on lined paper, including the word "MEMO" at the top and various illegible scribbles and lines throughout the page.





U903E H/P BOARD
PB0848-5


U902 MA

21	SHIELD EARTH
20	VIDEO IN
19	VIDEO OUT
18	RAPID BLK EARTH
17	VIDEO EARTH
16	RAPID BLANKING
15	RED IN
14	NC
13	RED EARTH
12	NC
11	GREEN IN
10	NC
9	GREEN EARTH
8	EXT./TV
7	BLUE IN
6	AUDIO IN(L)
5	EARTH
4	AUDIO EARTH
3	AUDIO OUT (L)
2	AUDIO IN(R)
1	AUDIO OUT (R)

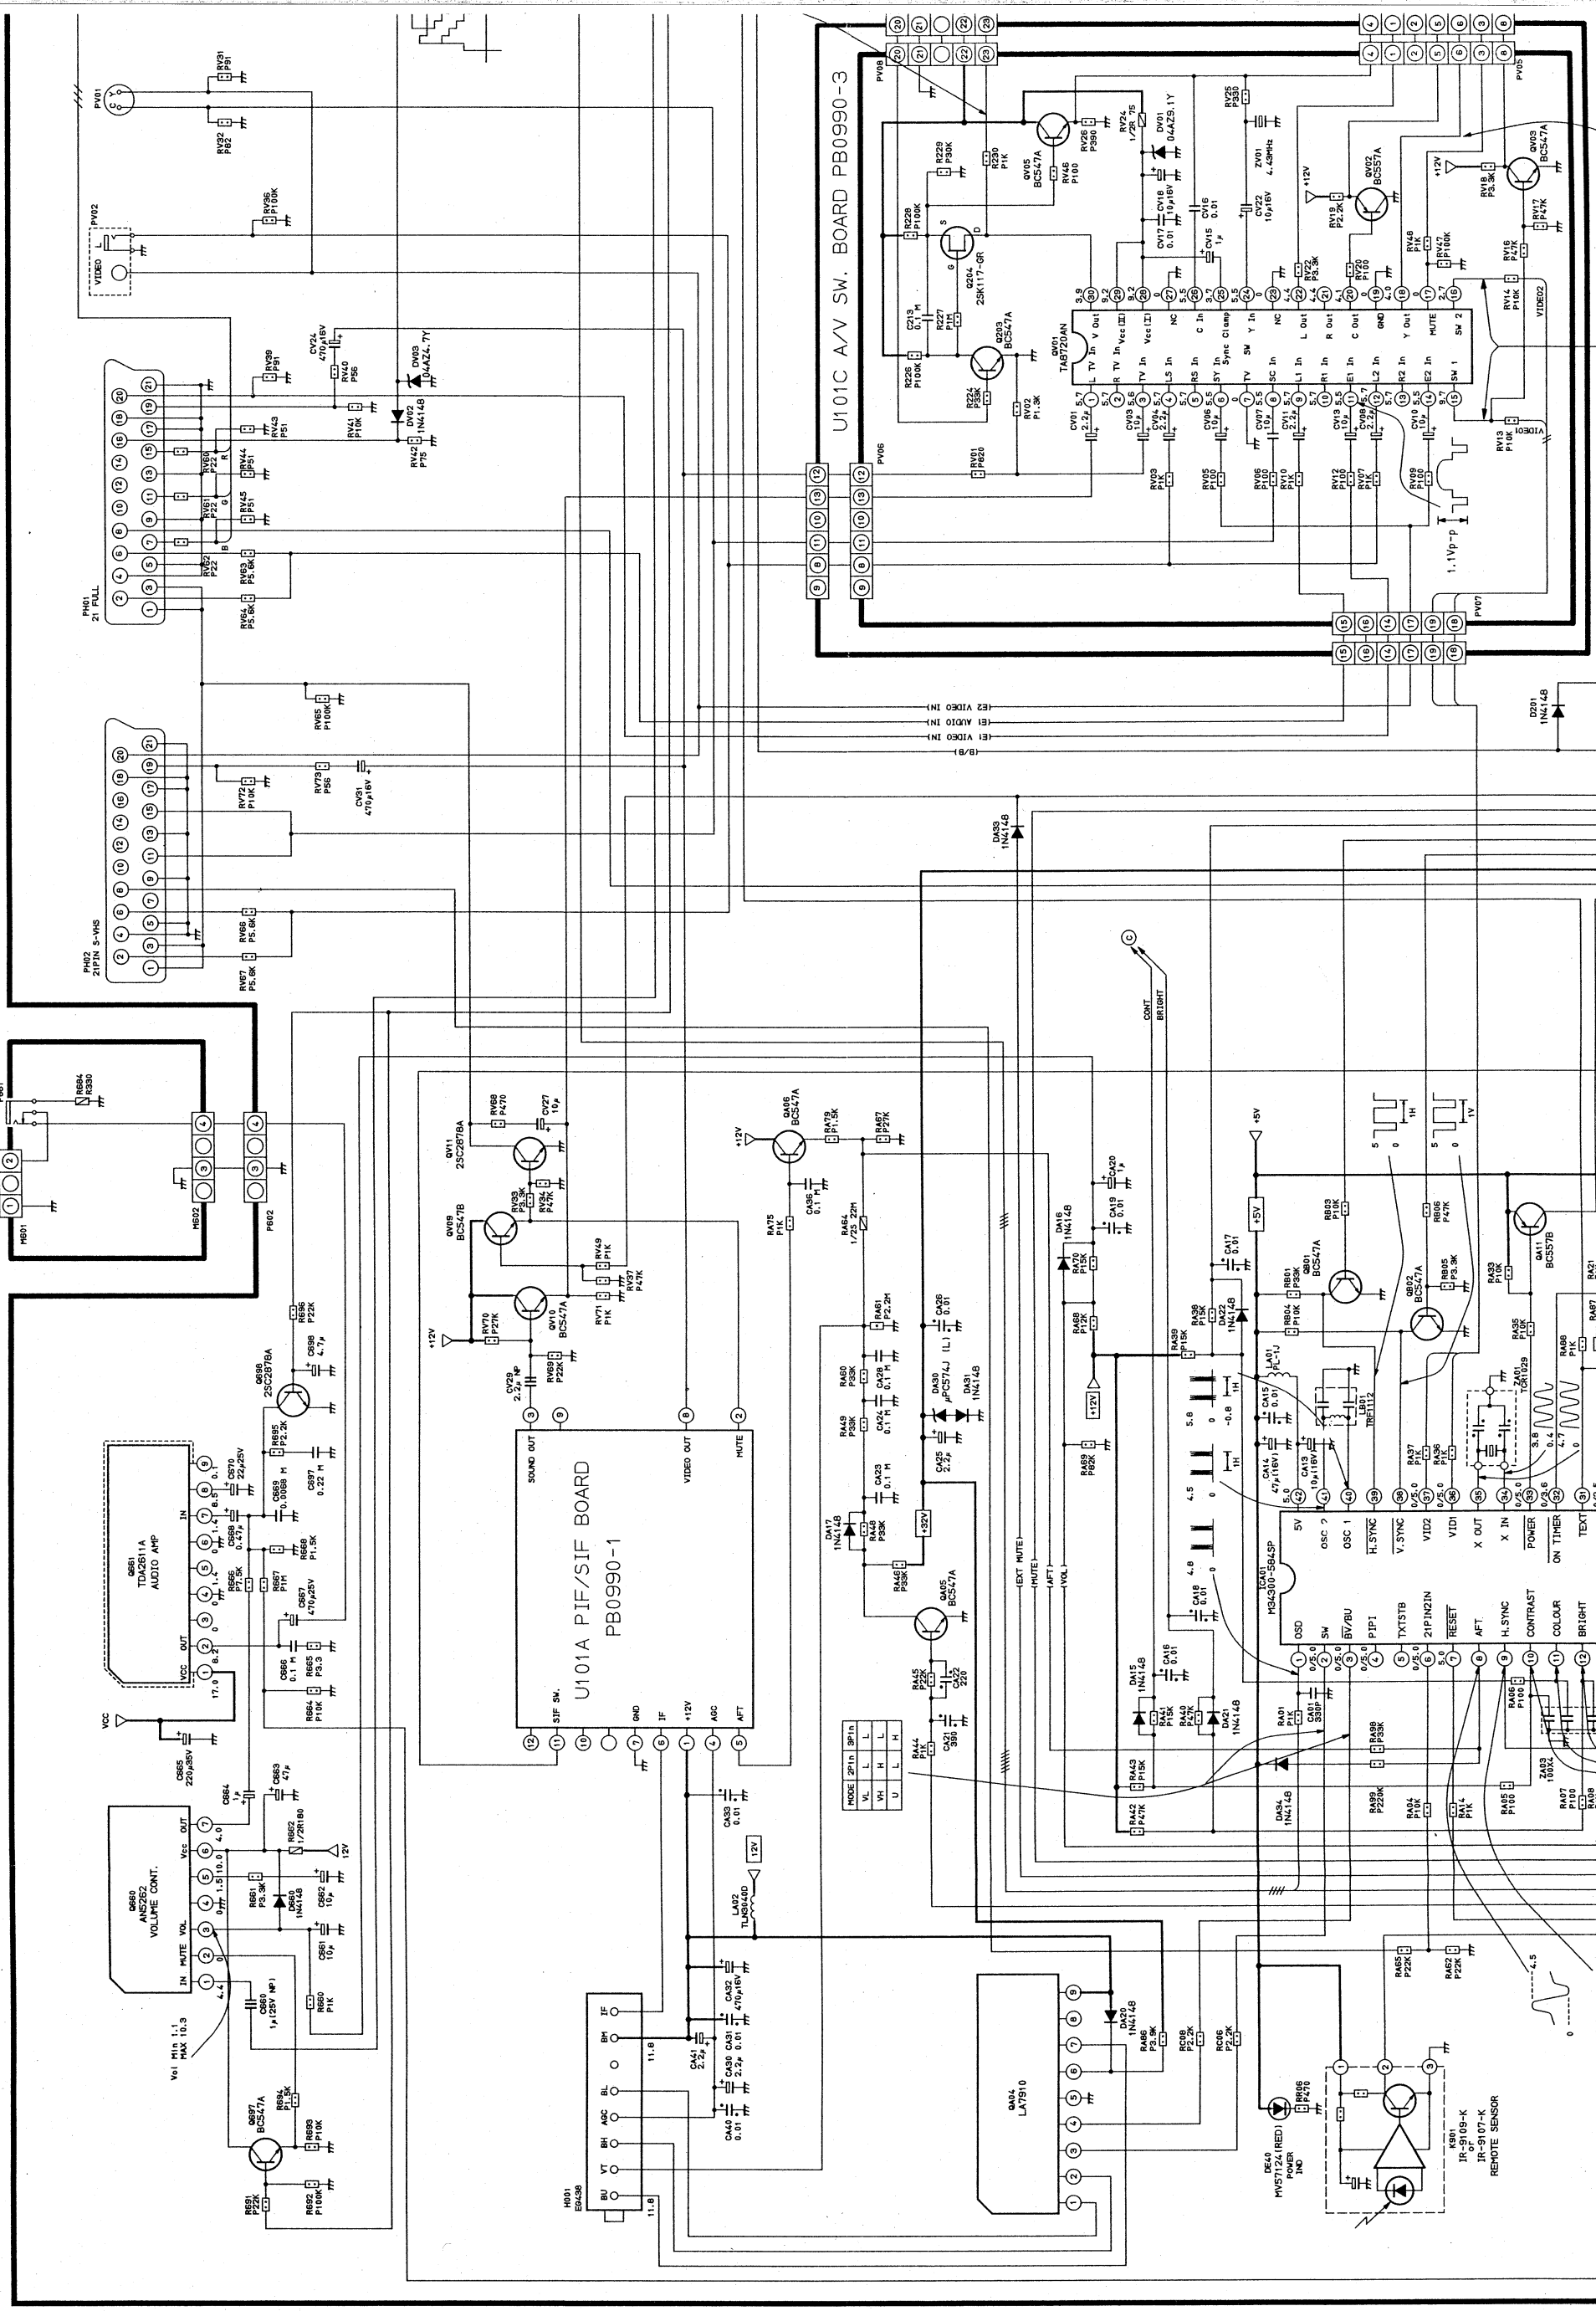

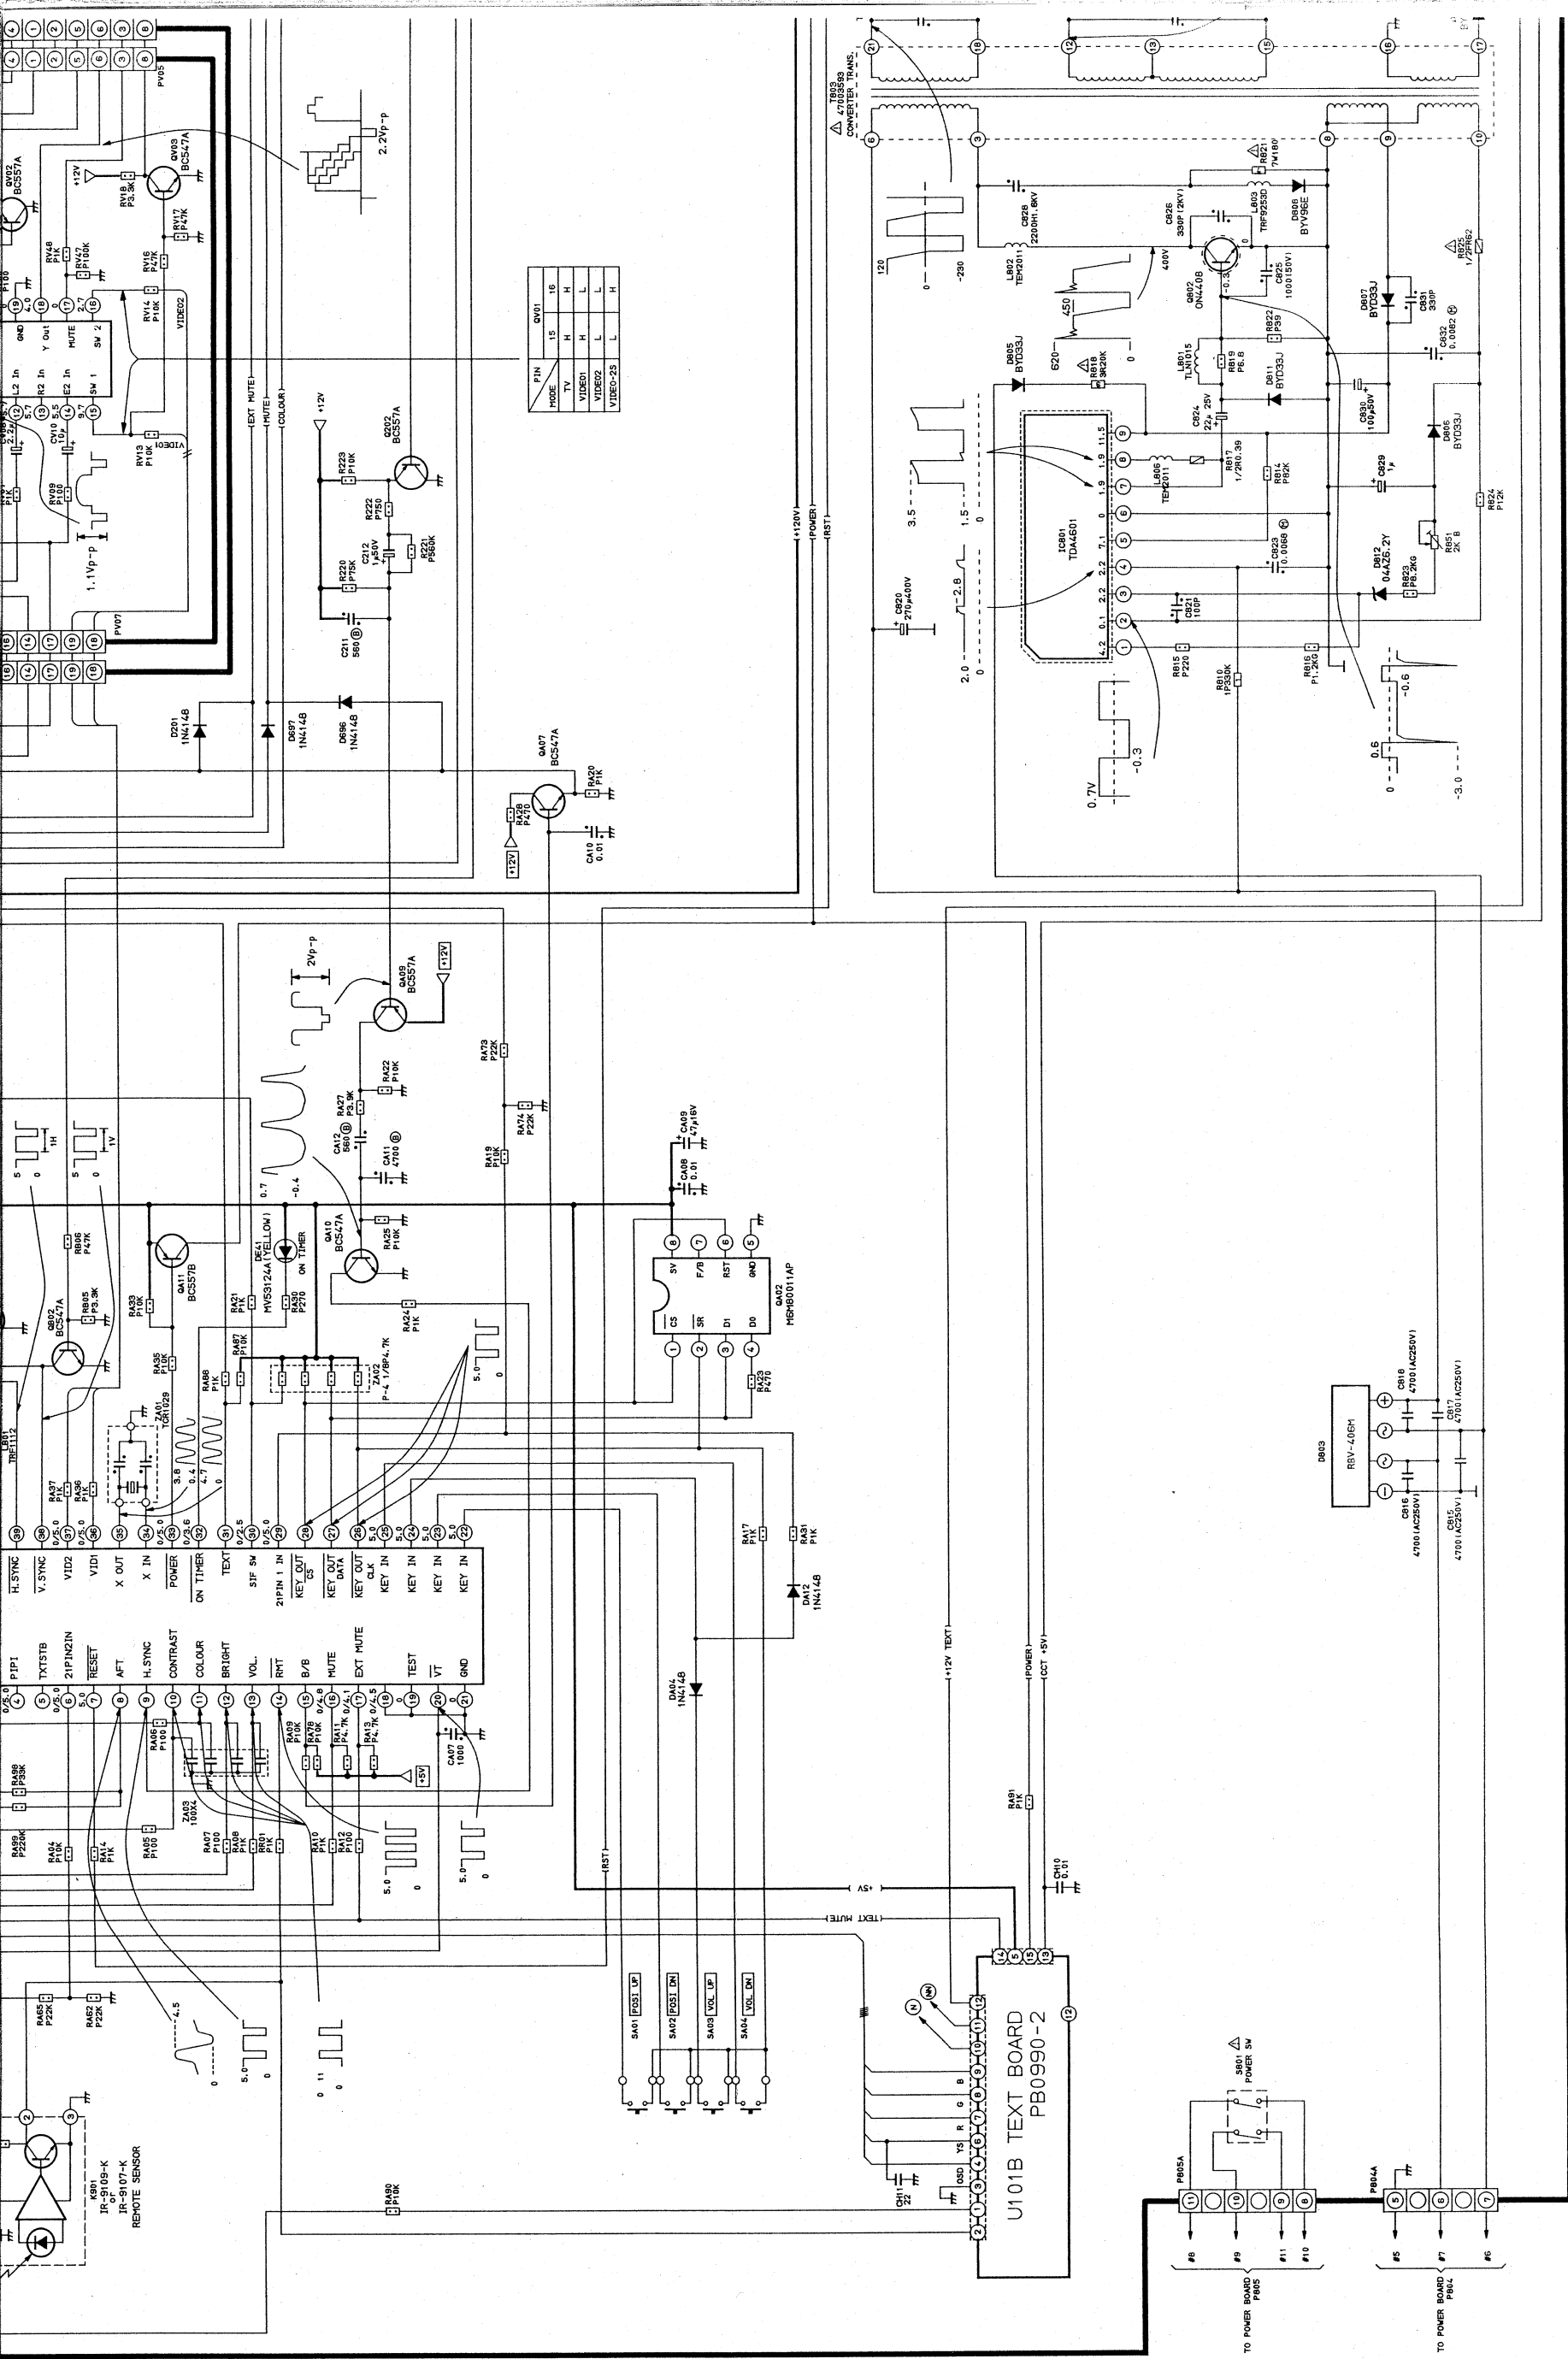

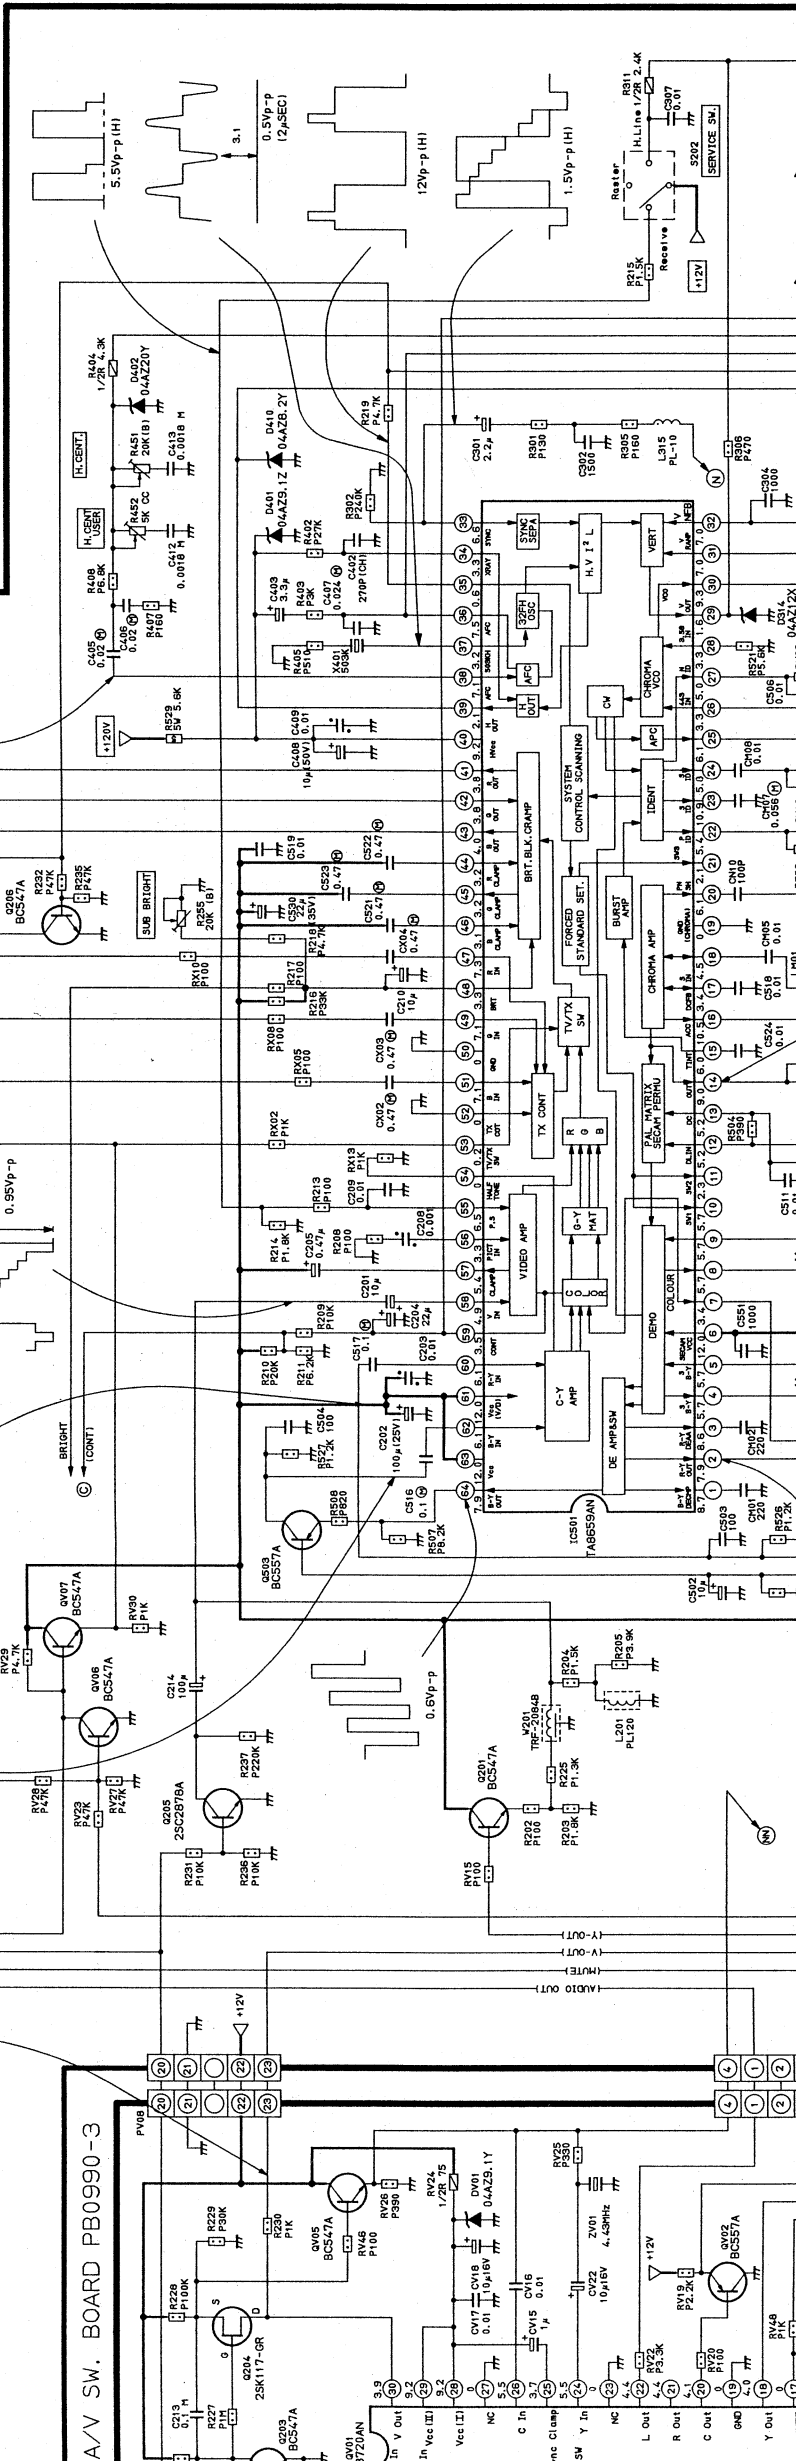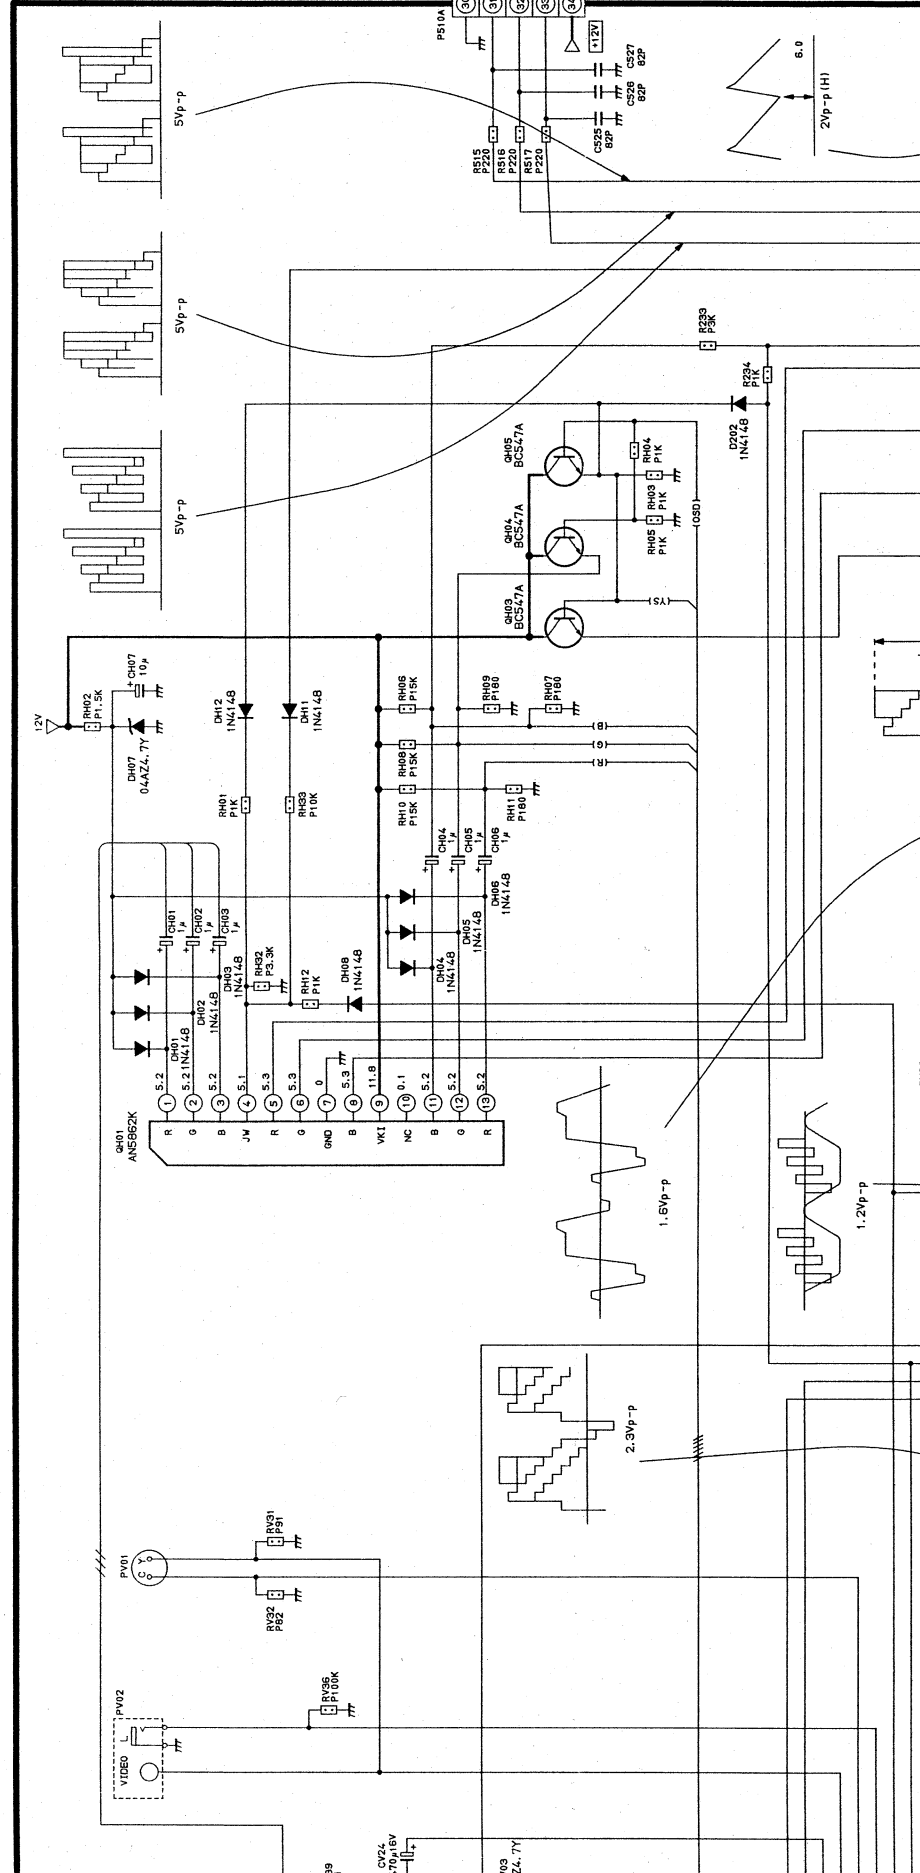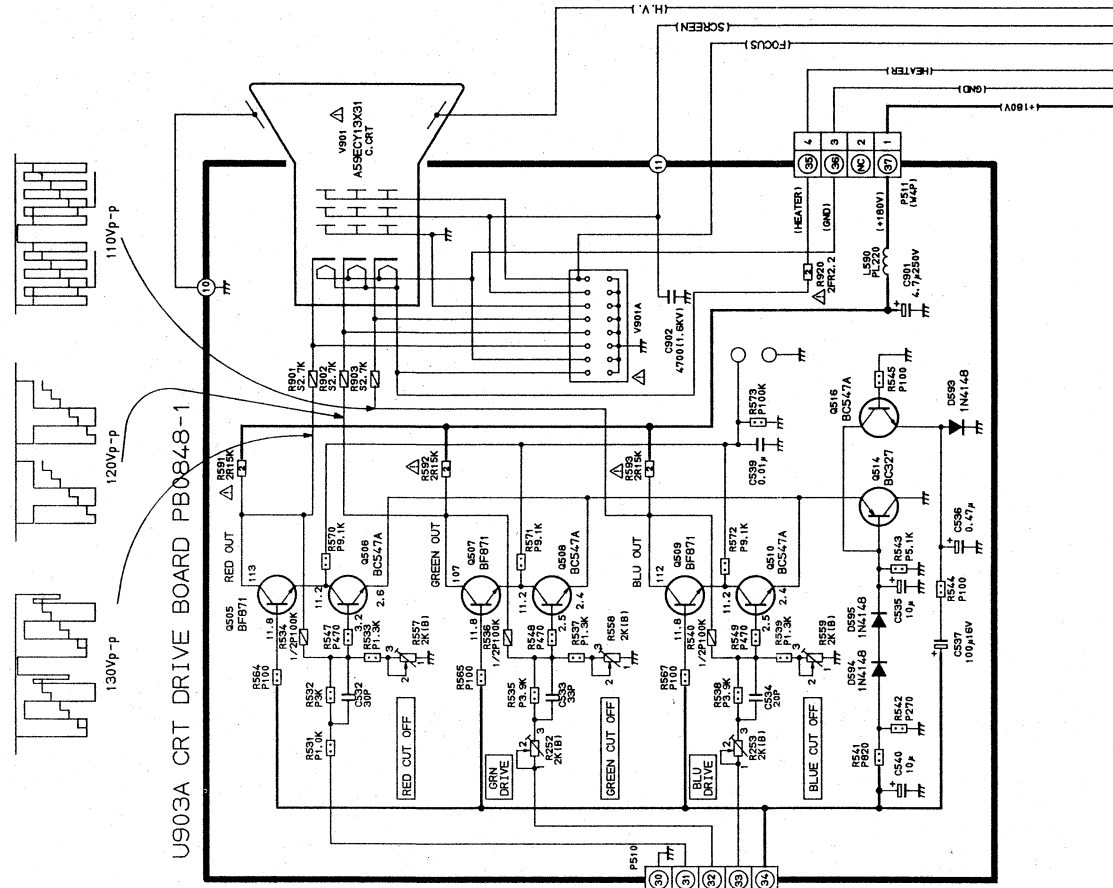

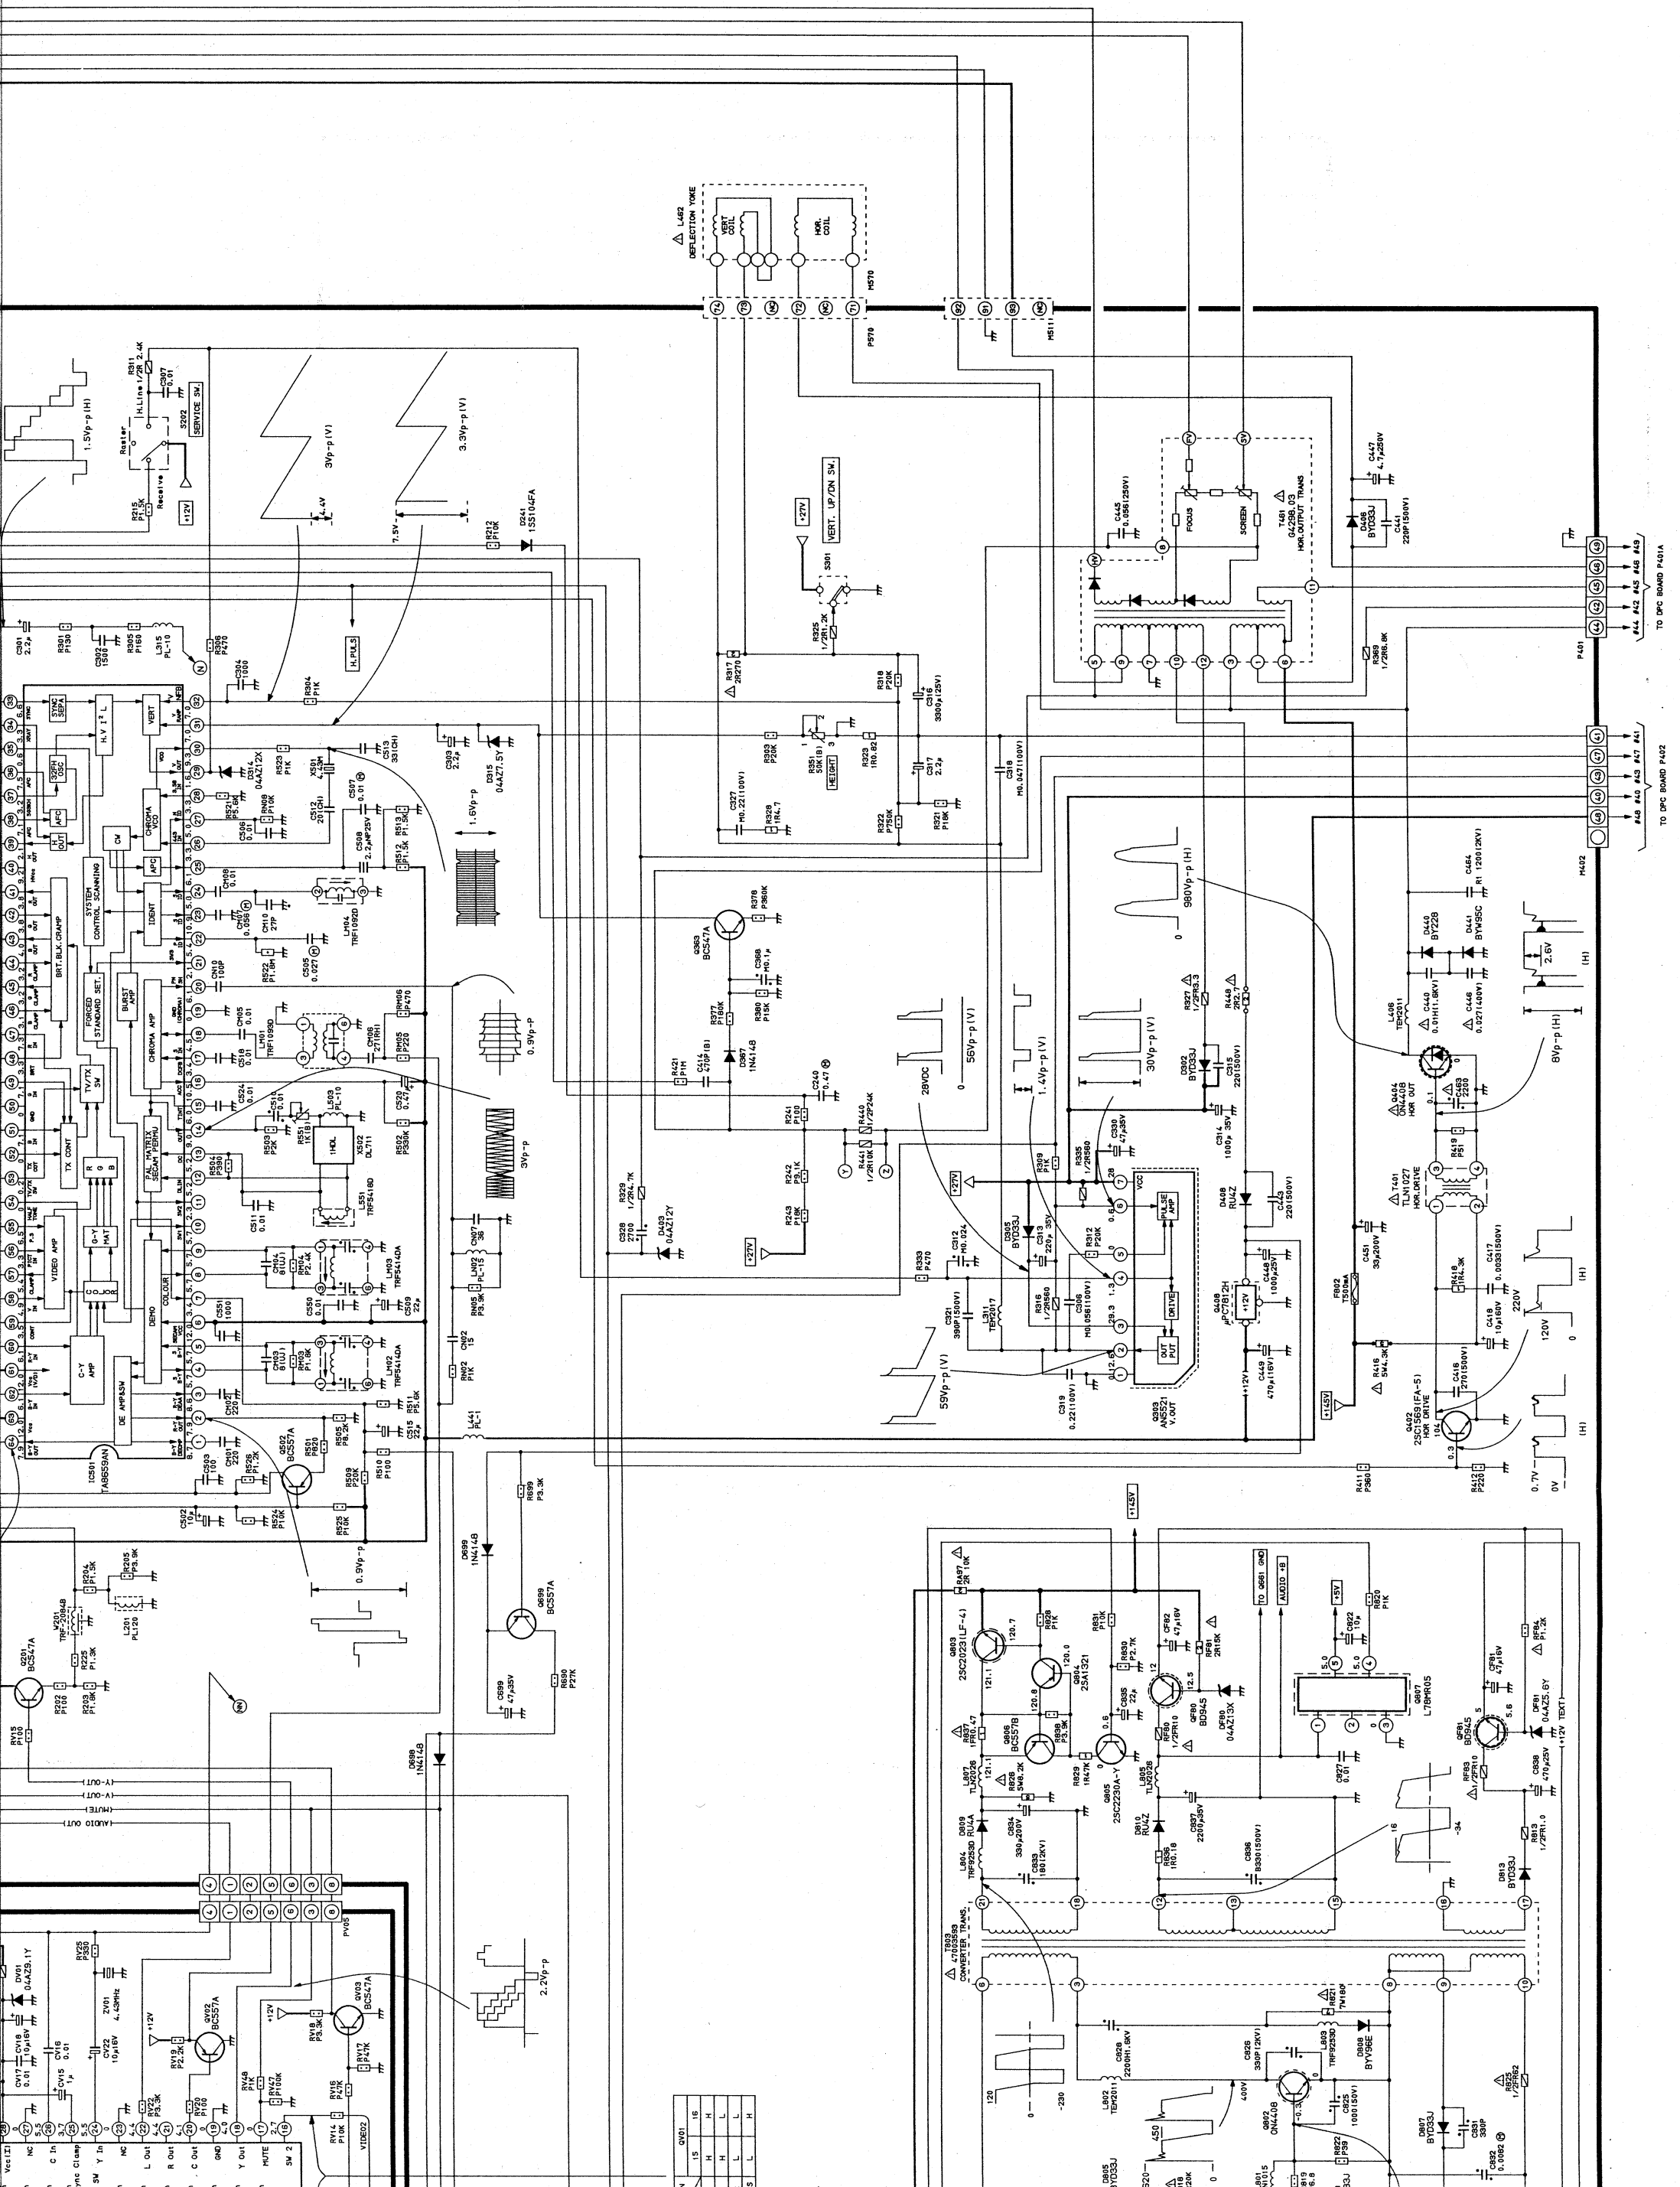

IMPORTANT SAFETY NOTICE

Component marked with the International Hazard Symbol must, if changed, be replaced by an approved type and must be mounted as the original. This will ensure that the safety standards adhered to during manufacture will be maintained following any servicing procedure.

OBSERVATION OF VOLTAGES AND WAVEFORMS

- 1. Voltage readings were obtained using a high impedance digital voltmeter.
- 2. (—) or ground lead of instruments should be connected to the ground marked (L) in the schematic on checking Non-isolated circuit surrounded by mark but should be connected to the points marked (—) on checking isolated circuit.
- 3. The voltage readings may vary as much as ±20%.
- 4. Check that the Tuning, A.F.C., Brightness, Contrast and Colour controls are adjusted for the best picture, making sure that the Contrast, Brightness and Colour controls are set near to their mid-positions.
- 5. The waveforms were taken using a standard colour bar signal and were observed using a wide band oscilloscope via a low capacity probe.

NOTES:

- 1. This circuit diagram is subject to change without notice.

EXPRESSION


VALUE OF RESISTOR, CAPACITOR and INDUCTOR



- 1. Resistance is shown in ohm, k=1,000, M=1,000,000.
- 2. Unless otherwise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
- 3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

GROUNDING SYMBOL


- 1. L: Non isolated ground, — : Isolated ground.

RESISTO	
Prefixed to	
	Carb.
	Oxide
	Ins. C.
	Wirt
	Cement
	Fus

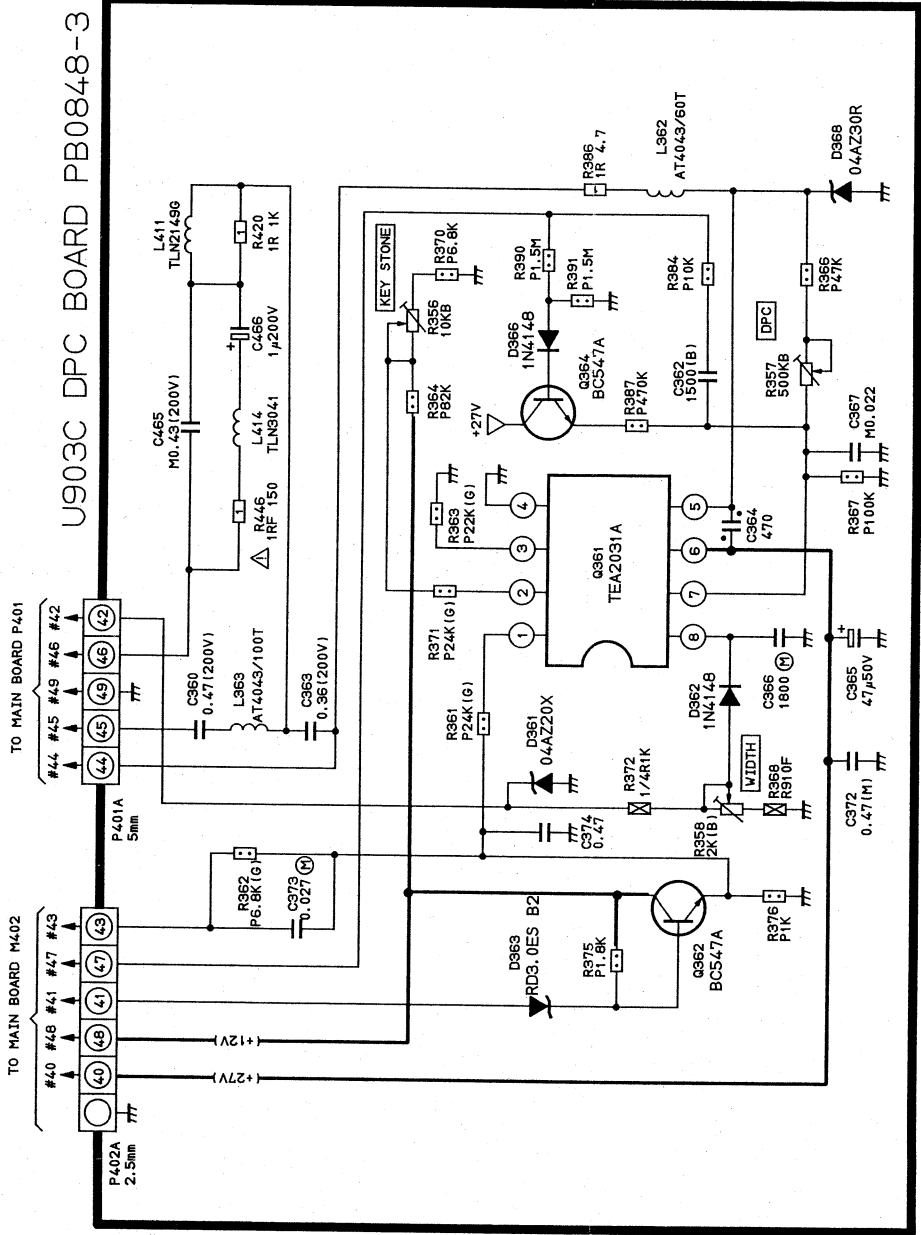

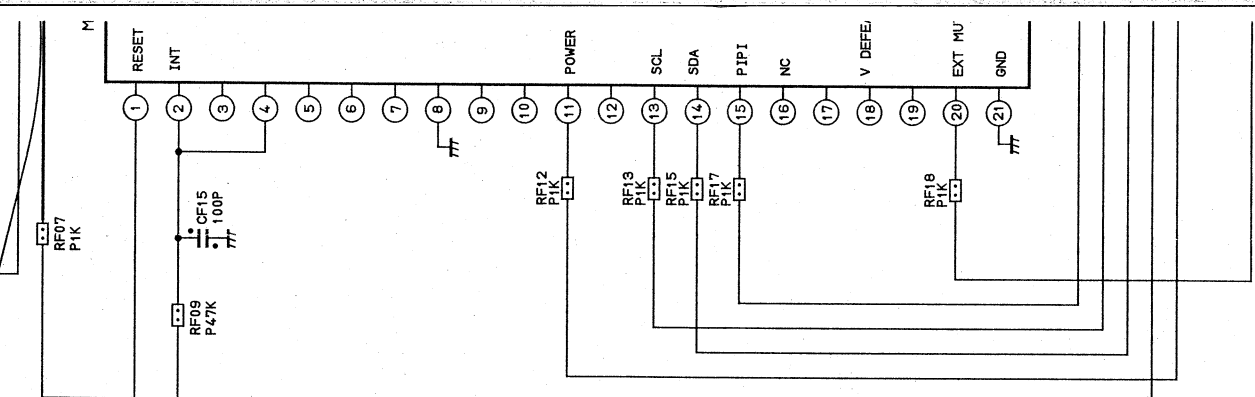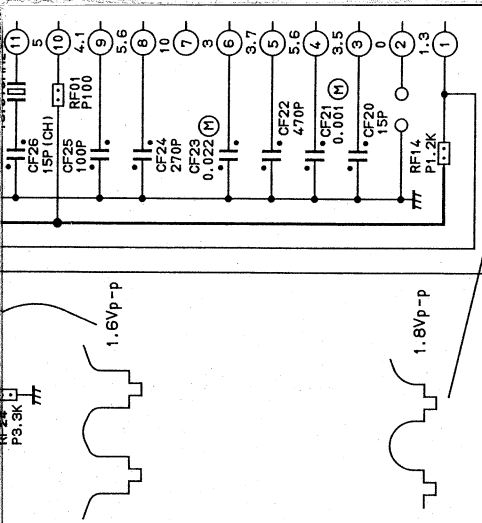

U101A PIF/SIF BOARD PB0990-1

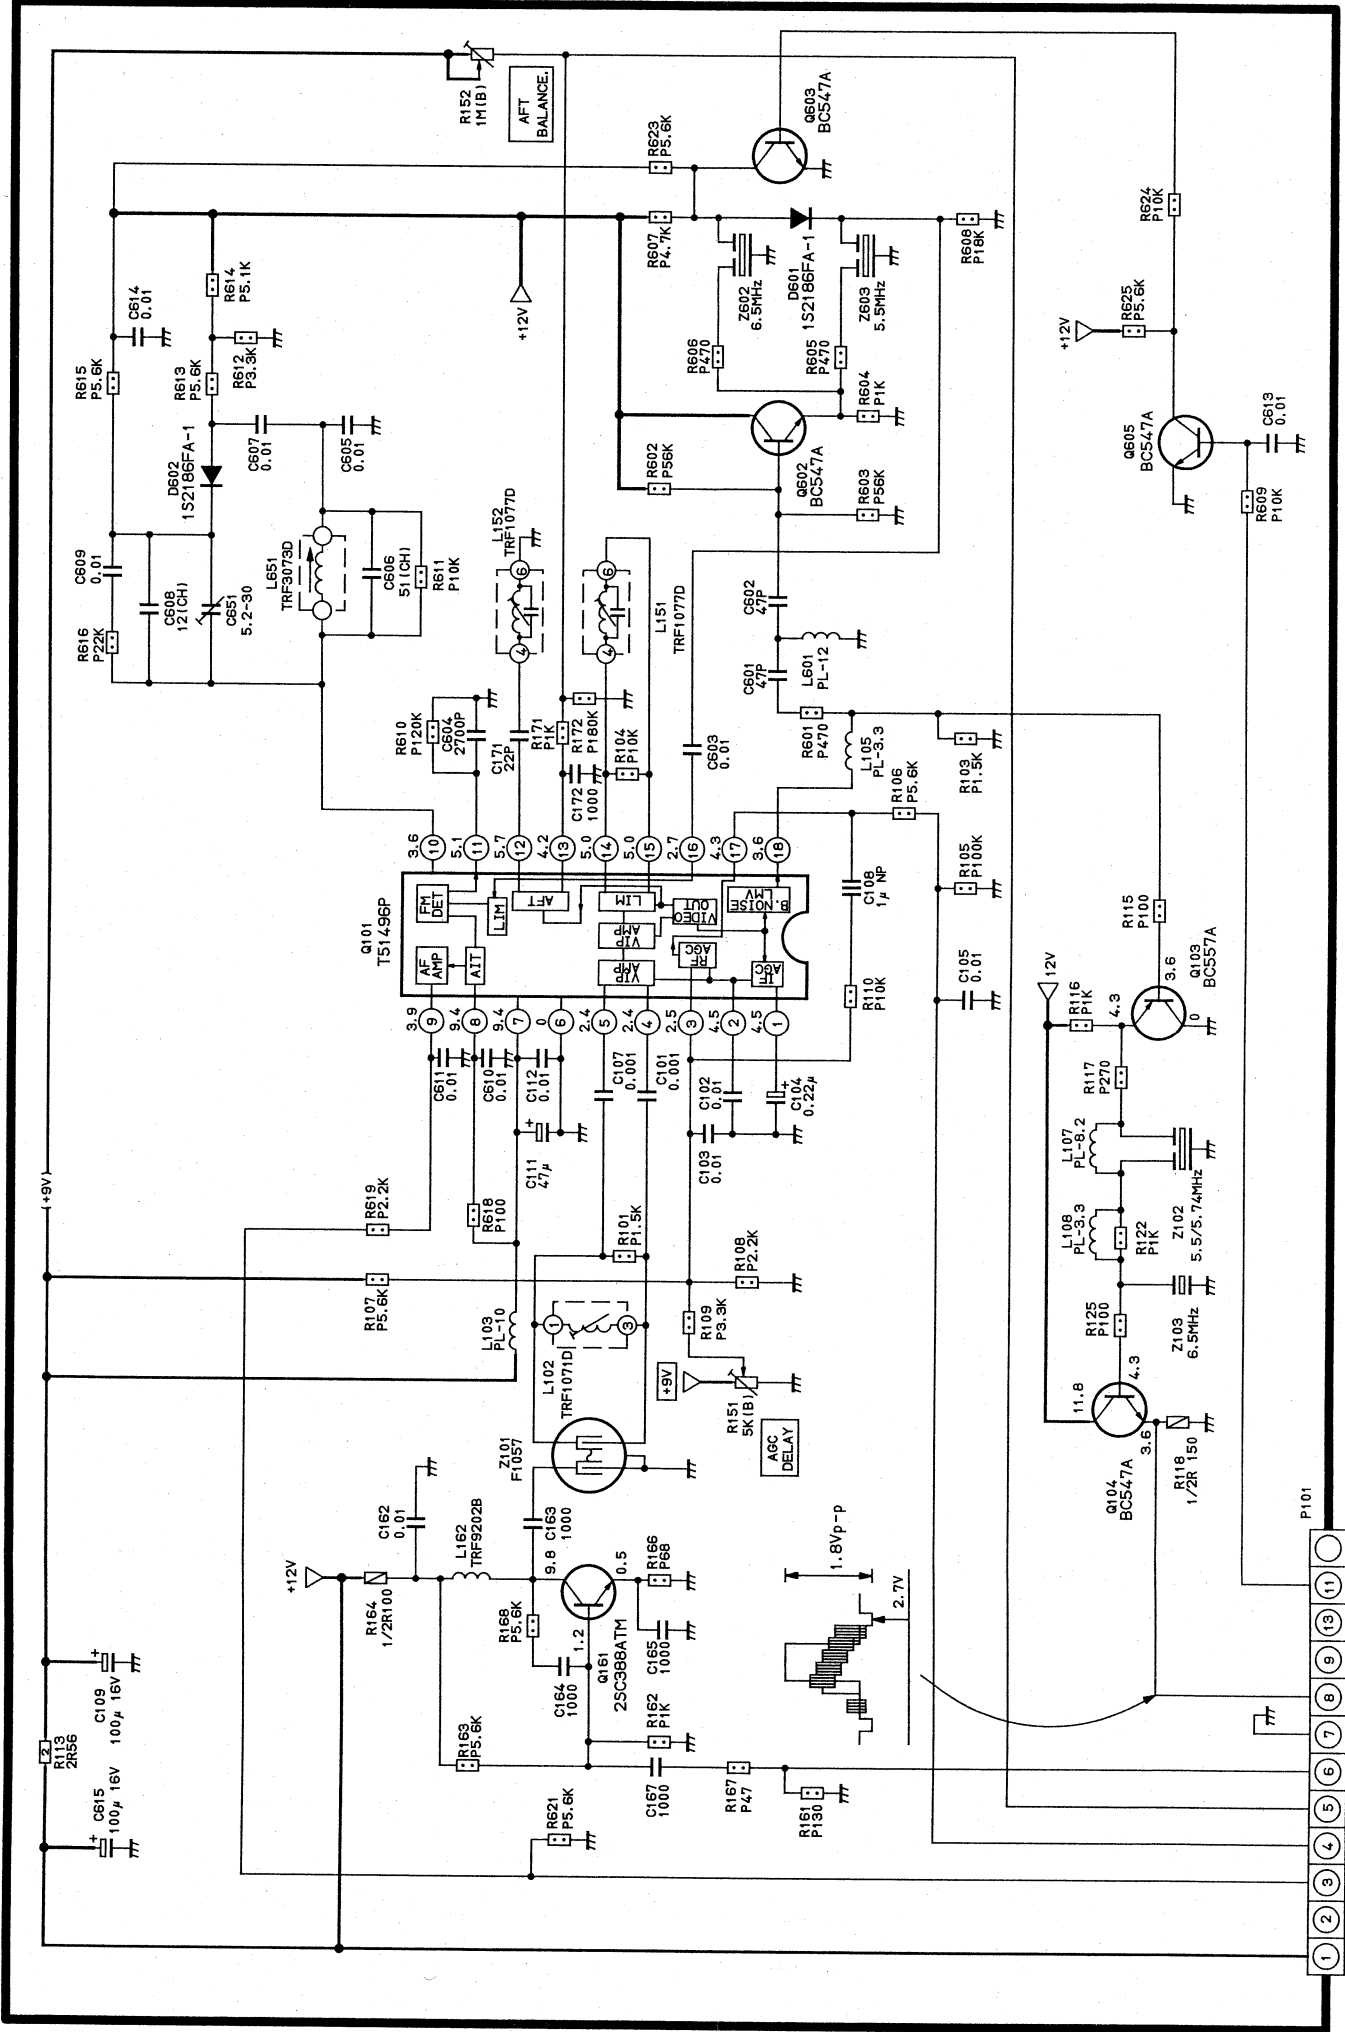

RESISTORS

Prefixed to values:

TYPE	MARK
Carbon Comp.	S
Oxide Metal Film	R
Ins. Carbon Film	P
Wire Wound	W
Cement covered W.W.	NO MARK
Fusible Res.	FR

Suffixes to values:

TOLERANCE	MARK
±1%	(F)
±2%	(G)

Suffixes to VR values:

LAW	MARK
Linear	(B)
'C' Curve Characteristic	(C)

CAPACITORS

Rating Markings:

Type	Mark
Ceramic Disc 50V Only	— —
Electrolytic	— — + —
Electrolytic Non-Polar	— — + —
Variable Capacitor	— — + —
Other	— —


Rating Markings:

WATTAGE	MARK
1/6W	— — •
1/4W	— — •
1/2W	— — X
1W	— — 1
2W	— — 2

WATTAGE	MARK
3W	— — 3
5W	— — 5
10W	— — 10
15W	— — 15
20W	— — 20
25W	— — 25

re expressed in
re expressed in

U903B POWER BOARD PB0848-2

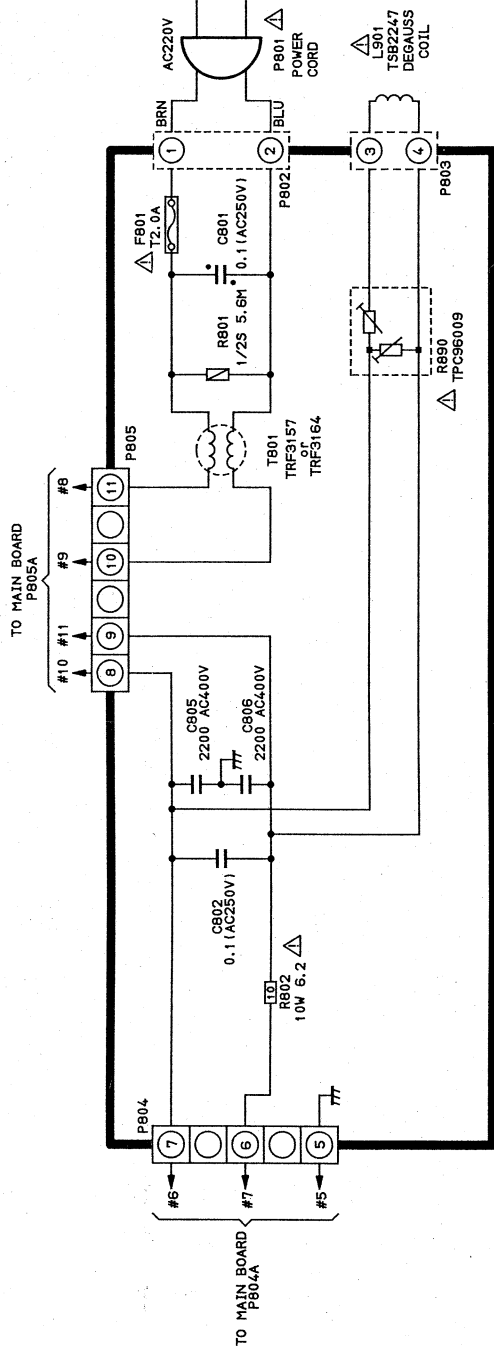

TEXT BOARD PB0990-2

